 


- 1 Battery (12 V)
- 2 High-voltage battery
- 3 High-voltage disconnect device



Airbag



Seat belt tensioner



 
Restraint systems control unit



Body reinforcement



Battery 12 V



High-voltage battery




High-voltage components



High-voltage disconnect device



Vehicle identification

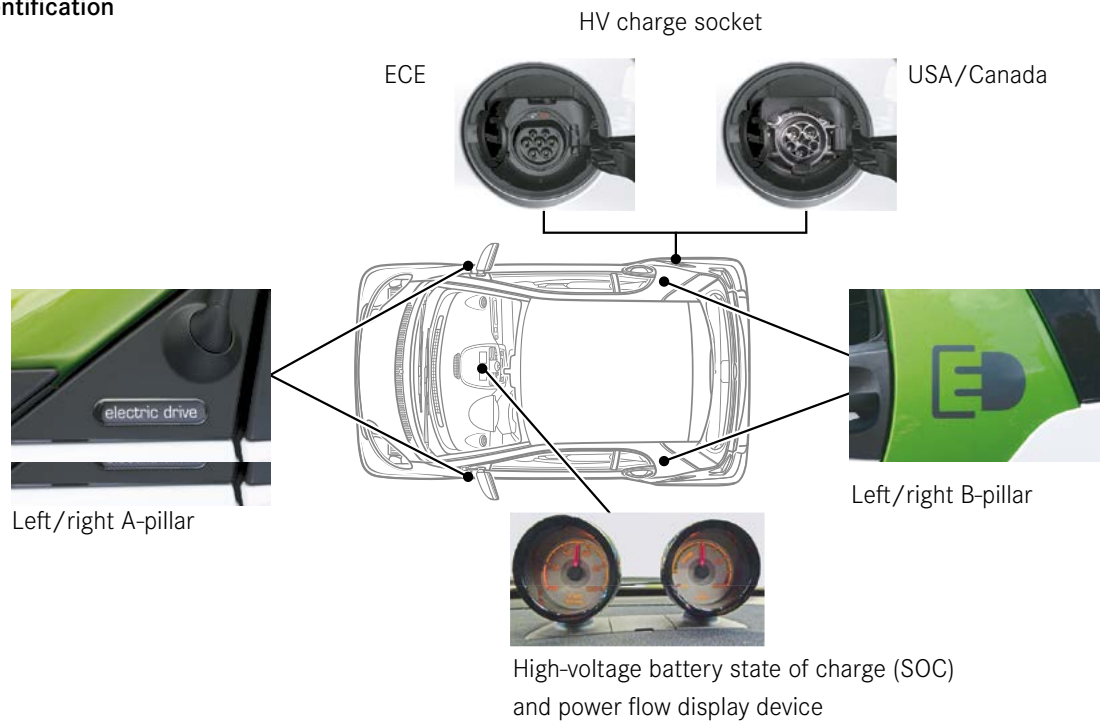

High-voltage disconnect device

The high-voltage disconnect device is located on the underside of the instrument panel on the left side.



Pull connector (1) out of bracket