


$\frac{Mercedes-Benz}{220d/220d} \frac{4M}{220d/220d} \frac{4M}{200d/220d} \frac{4M}{200d/220d} \frac{4M}{200d} \frac{100}{200d} \frac{100}{200} \frac{100}{200d} \frac{10$

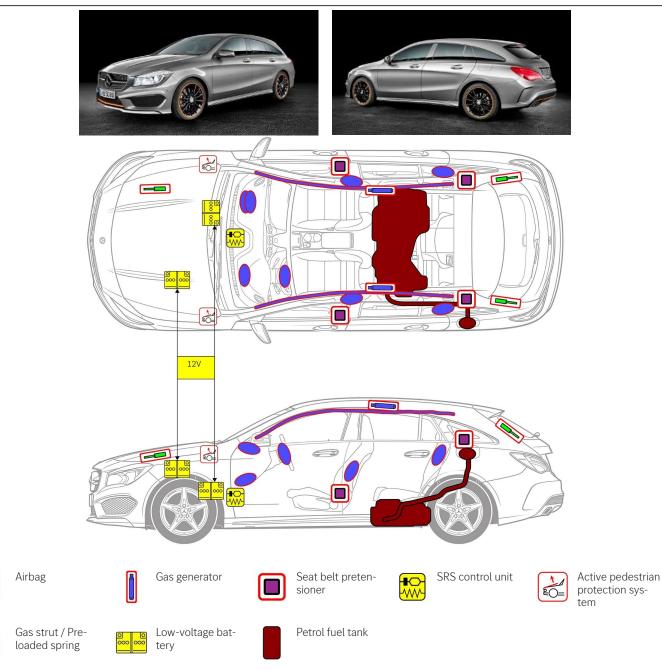




Note: Please see our $\underline{\mathsf{emergency}}\ \mathsf{response}\ \mathsf{guide}$ for more information



$\frac{Mercedes-Benz}{220d/220d} \frac{4M}{250} \frac{4M}{180d/200d} \frac{4M}{200d} \frac{180d}{200d} \frac{200d}{200d} \frac{4M}{200d} \frac{180d}{200d} \frac{200d}{200d} \frac{180d}{200d} \frac{18$



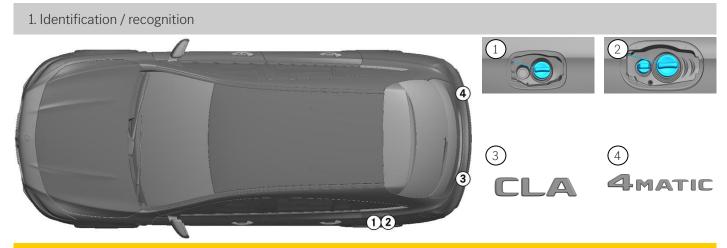

3. Disable direct hazards / safety regulations

Switch off the ignition:

- 1. Turn the ignition key anti-clockwise in the ignition lock and remove it from the ignition lock.
- 2. Remove the ignition key from the vehicle.

Switch off the ignition:

- 1. Press the START/STOP button without actuating the service brake.
- 2. Keep the electronic vehicle key at a distance of at least 5 m.





The absence of engine noise does not mean that the vehicle is switched off.



A restart is possible until the vehicle is switched off.

Disconnecting the 12 V battery

1. Remove the cover from the 12-volt battery.

2. Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.




The passive safety systems (airbags and seat belt pretensioners) are deactivated.







4. Access to the occupants

When rescuing the vehicle occupants, the components of the restraint systems (in particular pyrotechnic elements) must be taken into account in accordance with the information on page 1.

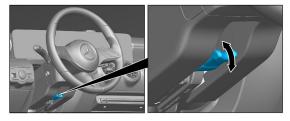


Steering wheel adjustment

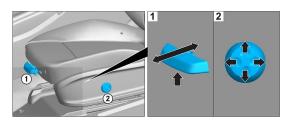

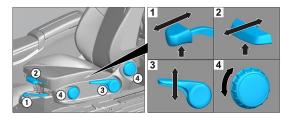

Seat adjustment (mechanical)



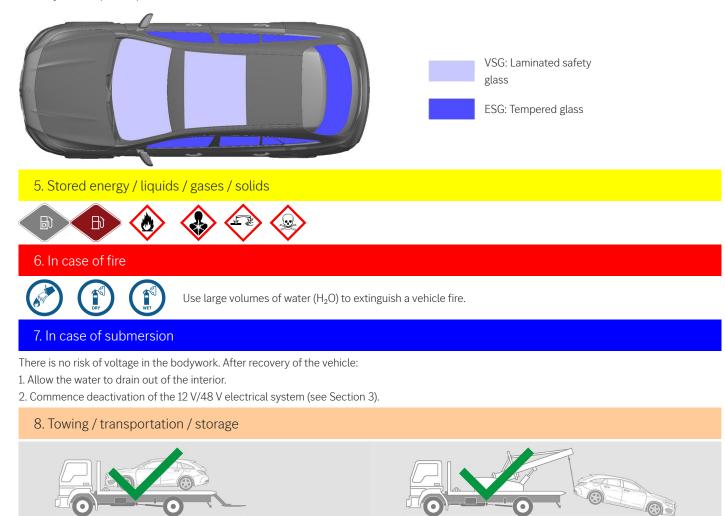





9. Important additional information

You can find more information in the Guidelines for car towing services.

