






- | | | | | | | | | | |
|-------------------------------------------------------------------------------------|---------------------------------------|-------------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------|-------------------------------------|
|  | Airbag |  | Gas generator |  | Seat belt pretensioner |  | SRS control unit |  | Active pedestrian protection system |
|  | Automatic roll-over protection system |  | Gas strut / Pre-loaded spring |  | High strength zone |  | Low-voltage battery |  | Petrol fuel tank |

Note: Please see our [emergency response guide](#) for more information




1. Identification / recognition

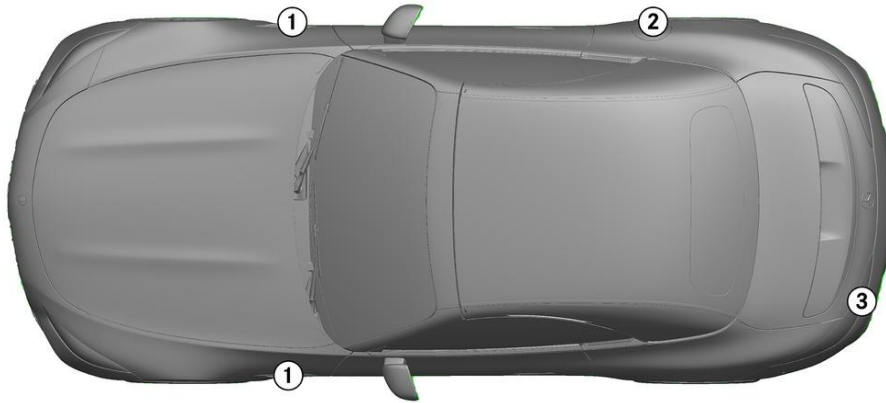

①

V8 BITURBO

②

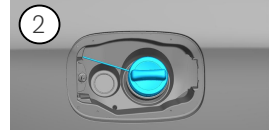


③


AMG

2. Immobilisation / stabilisation / lifting

Parking brake

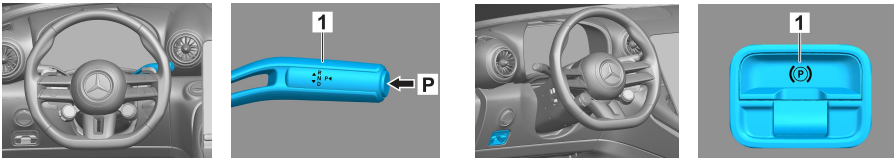

Press the P switch on the gear selector (1). The parking brake is automatically activated. Electric parking brake (1)

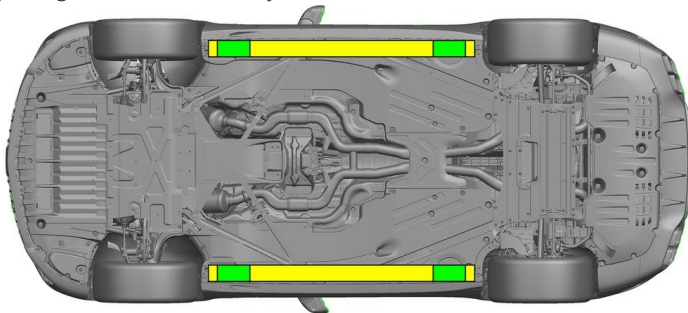

Suitable lifting points



Suitable stabilisation points on the side



Additional deformation of the door sills and the underbody (e.g. through support with hydraulic equipment) must be avoided during the rescue.

3. Disable direct hazards / safety regulations

Switch off the ignition:

1. Press the START/STOP button without actuating the service brake.
2. Keep the electronic vehicle key at a distance of at least 5 m.



The absence of engine noise does not mean that the vehicle is switched off.



A restart is possible until the vehicle is switched off.



Disconnecting the 12 V/48 V battery

1. Remove the cover from the 12/48-volt battery in the engine compartment.
2. Disconnect the negative cable of the 12/48-volt battery at the screw connection and secure it against unintentional contact.





Disconnecting the 12/48 V battery



1. Remove the cover from the 12/48-volt battery in the boot.
2. Disconnect the negative cable of the 12/48-volt battery at the screw connection and secure it against unintentional contact.



The passive safety systems (airbags and seat belt pretensioners) are deactivated.


4. Access to the occupants

When freeing the occupants, areas of the bodywork which are made from high-strength steels and the components of the restraint systems (in particular pyrotechnic elements) must be taken into consideration in accordance with the information on page 1.



Slide a flat, non-metallic object behind the retracted door handle (1) from above and lever it slightly out.


Reach behind the door handle (1) from below and pull it out until you feel resistance, then hold.

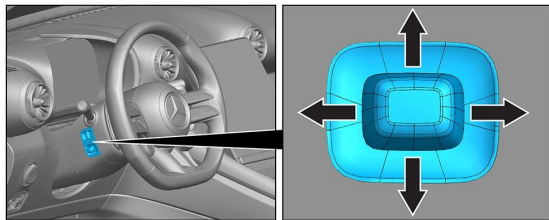

Steering wheel adjustment



Seat adjustment (electric)

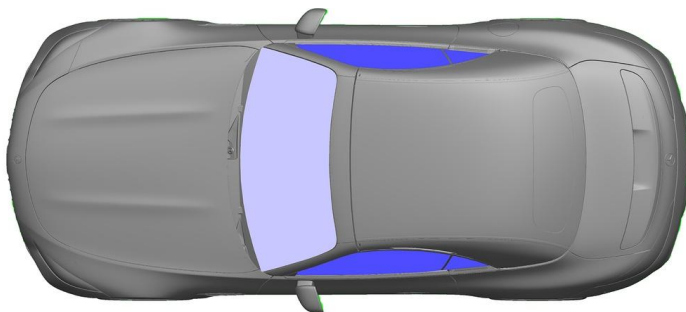

- VSG: Laminated safety glass
- ESG: Tempered glass

5. Stored energy / liquids / gases / solids

		12 V/ 48 V
		70 L
		720 ± 10 g

6. In case of fire



Use large volumes of water (H₂O) to extinguish a vehicle fire.




7. In case of submersion

There is no risk of voltage in the bodywork. After recovery of the vehicle:

1. Allow the water to drain out of the interior.
2. Commence deactivation of the 12 V/48 V electrical system (see Section 3).



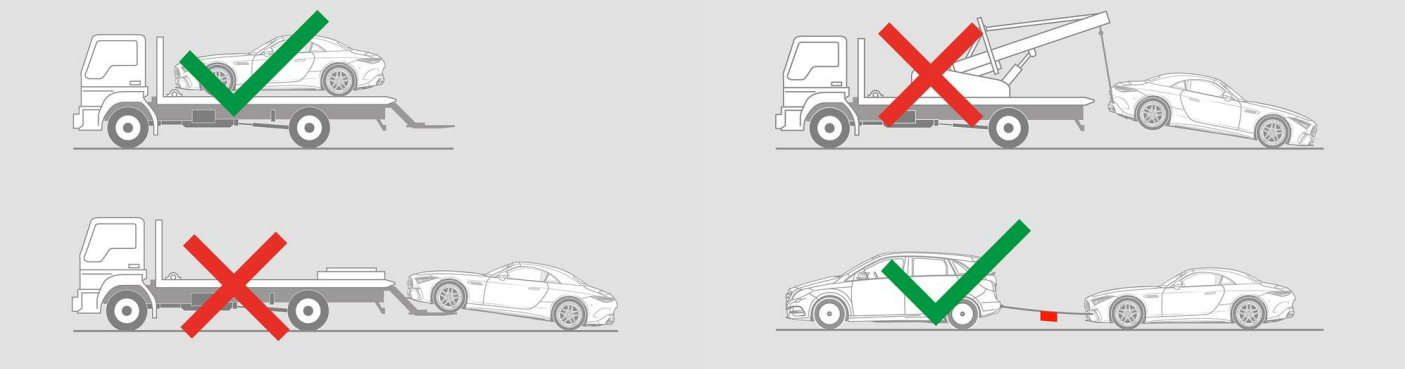





8. Towing / transportation / storage



9. Important additional information

You can find more information in the [Guidelines for car towing services](#).

10. Explanation of pictograms used

 Vehicle on fuel of liquid group 2	 General warning sign	 Flammable	 Hazardous to the human health
 Corrosives	 Acute toxicity	 Explosive	 Use water to extinguish the fire
 Use dry foam to extinguish the fire	 Use wet foam to extinguish the fire	 Bonnet	 Boot
 Remove smart key	 Air-conditioning component	 Warning; low temperature	