





 



① Main battery in trunk (vehicles equipped with spare wheel)

② Main battery in trunk (vehicles not equipped with spare wheel)

-  Airbag
-  Gas generator
-  Seat belt pretensioner
-  SRS control unit
-  Gas strut / Pre-loaded spring
-  High strength zone
-  Low-voltage battery
-  Petrol fuel tank

Note: Please see our [emergency response guide](#) for more information



1. Identification / recognition

