


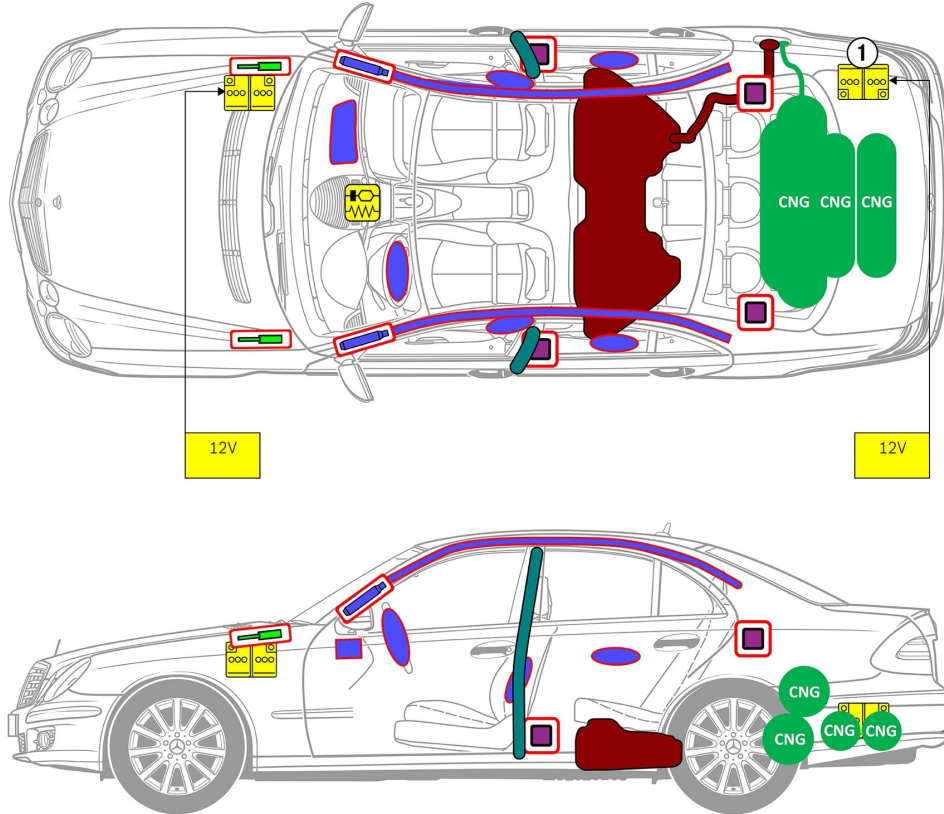

① Main battery in trunk

- | | | | | | | | | | |
|---|--------------------|---|---------------------|---|------------------------|--|---|---|-------------------------------|
|  | Airbag |  | Gas generator |  | Seat belt pretensioner |  | SRS control unit |  | Gas strut / Pre-loaded spring |
|  | High strength zone |  | Low-voltage battery |  | Petrol fuel tank |  | Gas tank with gas type indication (CNG) |  | Gas line (generic) |

Note: Please see our [emergency response guide](#) for more information



1. Identification / recognition

