



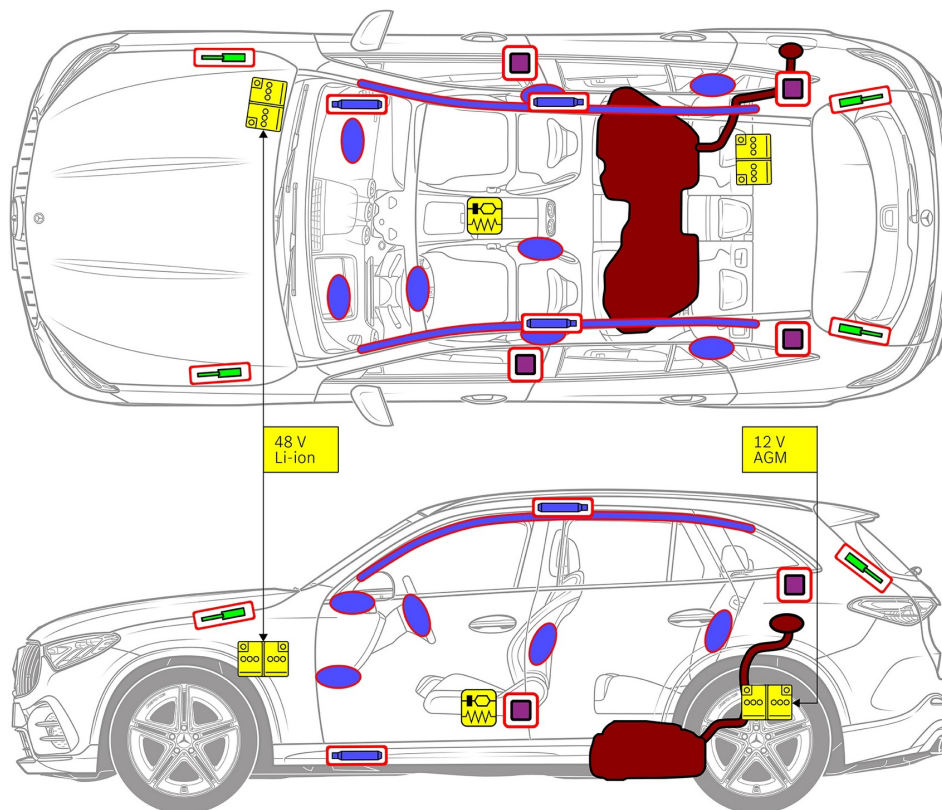

- | | | | | | | | | | |
|---|---------------------|---|------------------|---|------------------------|---|------------------|---|-------------------------------|
|  | Airbag |  | Gas generator |  | Seat belt pretensioner |  | SRS control unit |  | Gas strut / Pre-loaded spring |
|  | Low-voltage battery |  | Petrol fuel tank | | | | | | |




1. Identification / recognition

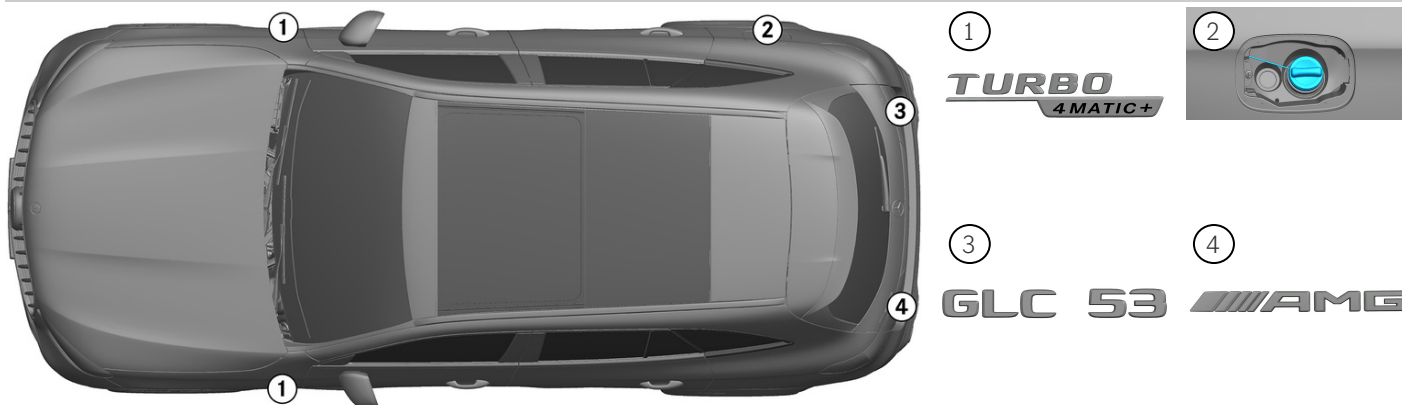


2. Immobilisation / stabilisation / lifting

Parking brake

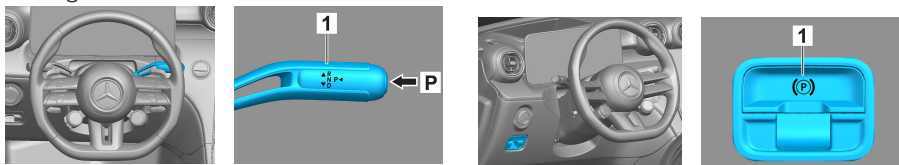

Press the P switch on the gear selector (1). The parking brake is automatically activated.

Electric parking brake (1)


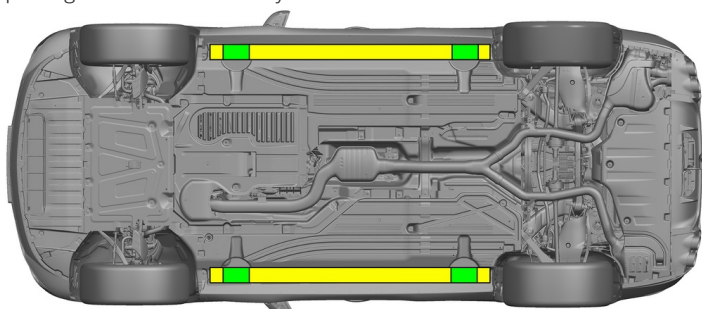


-  Suitable lifting points
-  Suitable stabilisation points on the side

3. Disable direct hazards / safety regulations

Switch off the ignition:

 - Press the START/STOP button without actuating the service brake.
- Keep the electronic vehicle key at a distance of at least 5 m.

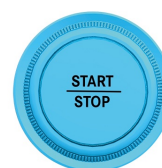

The absence of engine noise does not mean that the vehicle is switched off.



A restart is possible until the vehicle is switched off.



Disconnecting the 12 V battery

- Remove the cover from the 12-volt battery in the boot.
- Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.



The passive safety systems (airbags and seat belt pretensioners) are deactivated after disconnecting 12V battery.



10 seconds after disconnecting the 12V battery, the 48V system is automatically deactivated.




The 48 V battery is deactivated as soon as the airbag deploys.



Disconnecting the 48 V battery


- Remove the cover from the 48-volt battery in the engine compartment.
- Disconnect the negative cable of the 48-volt battery at the screw connection and secure it against unintentional contact.

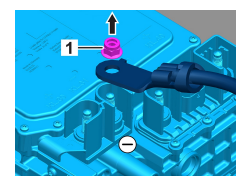




4. Access to the occupants


When rescuing the vehicle occupants, the components of the restraint systems (in particular pyrotechnic elements) must be taken into account in accordance with the information on page 1.

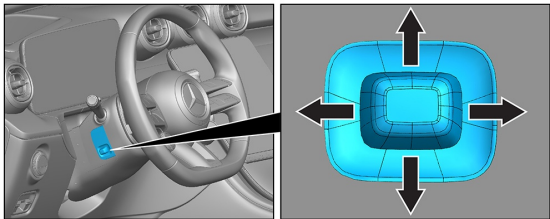


Steering wheel adjustment

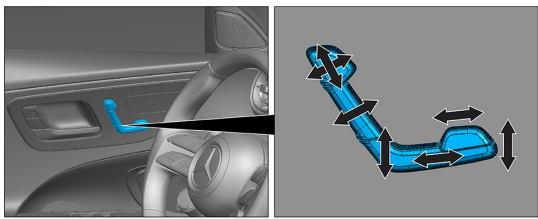


Seat adjustment (electric)

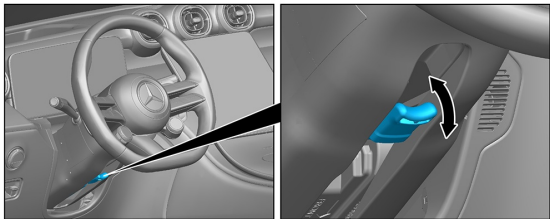

Steering wheel adjustment

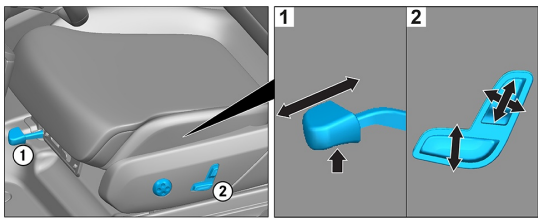

Seat adjustment (electric)

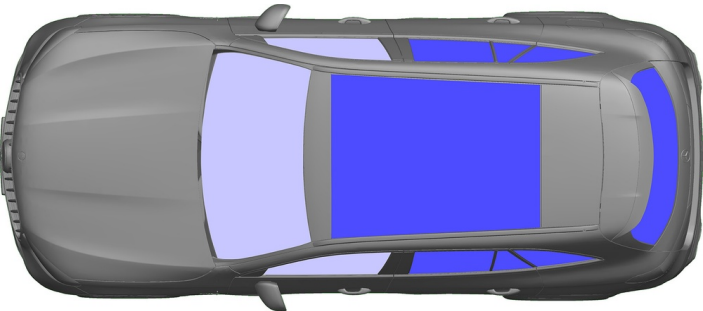

- VSG: Laminated safety glass
- ESG: Tempered glass

5. Stored energy / liquids / gases / solids

		48 V Li-ion
		12 V AGM
		62 L
		630 ± 10 g

6. In case of fire




Use large volumes of water (H₂O) to extinguish a vehicle fire.
Use large volumes of water (H₂O) to cool the Li-ion battery.

7. In case of submersion

- There is no risk of voltage in the bodywork. After recovery of the vehicle:
1. Allow the water to drain out of the interior.
 2. Commence deactivation of the 12 V/48 V electrical system (see Section 3).



8. Towing / transportation / storage

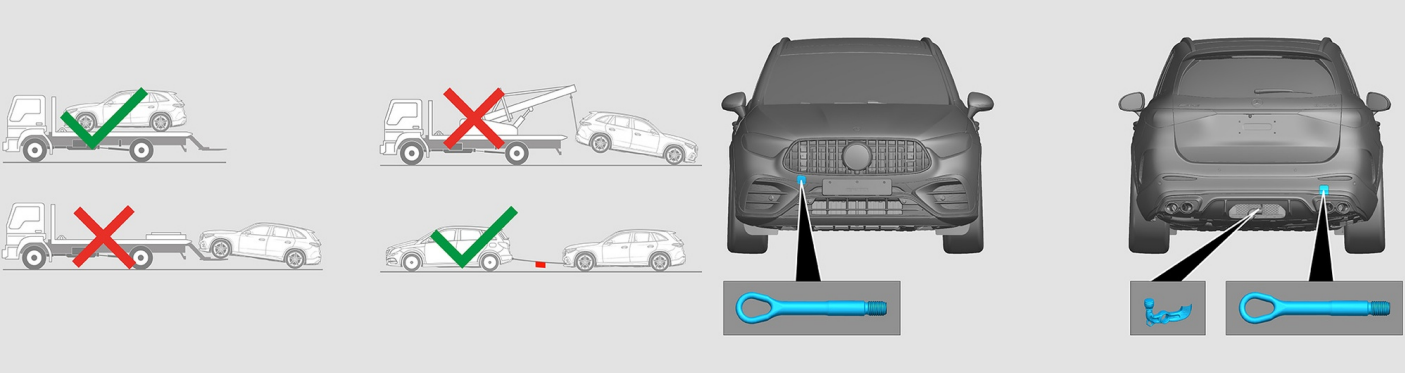

9. Important additional information

You can find more information in the [Guidelines for car towing services](#).

Note: Please see our [emergency response guide](#) for more information

10. Explanation of pictograms used

	Vehicle on fuel of li- quid group 2		General warning sign		Flammable		Hazardous to the human health
	Corrosives		Acute toxicity		Explosive		Use water to extin- guish the fire
	Bonnet		Boot		Remove smart key		Air-conditioning com- ponent
	Warning; low temperat- ure						