

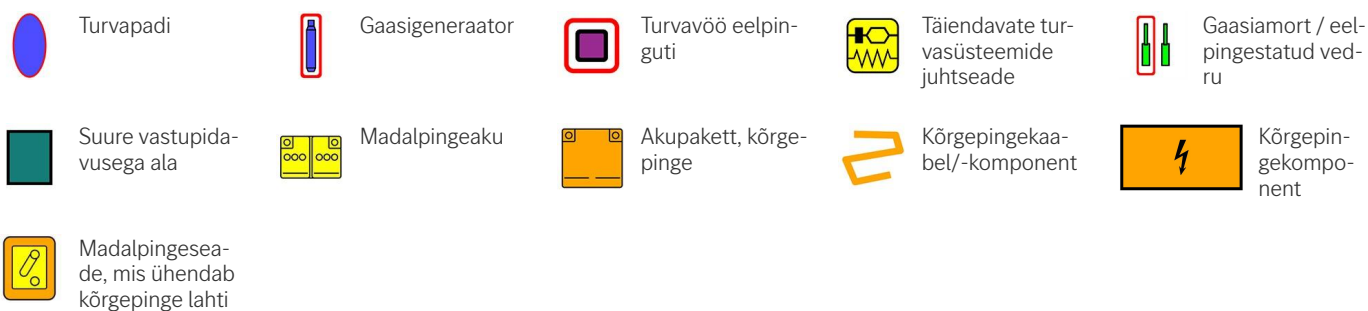
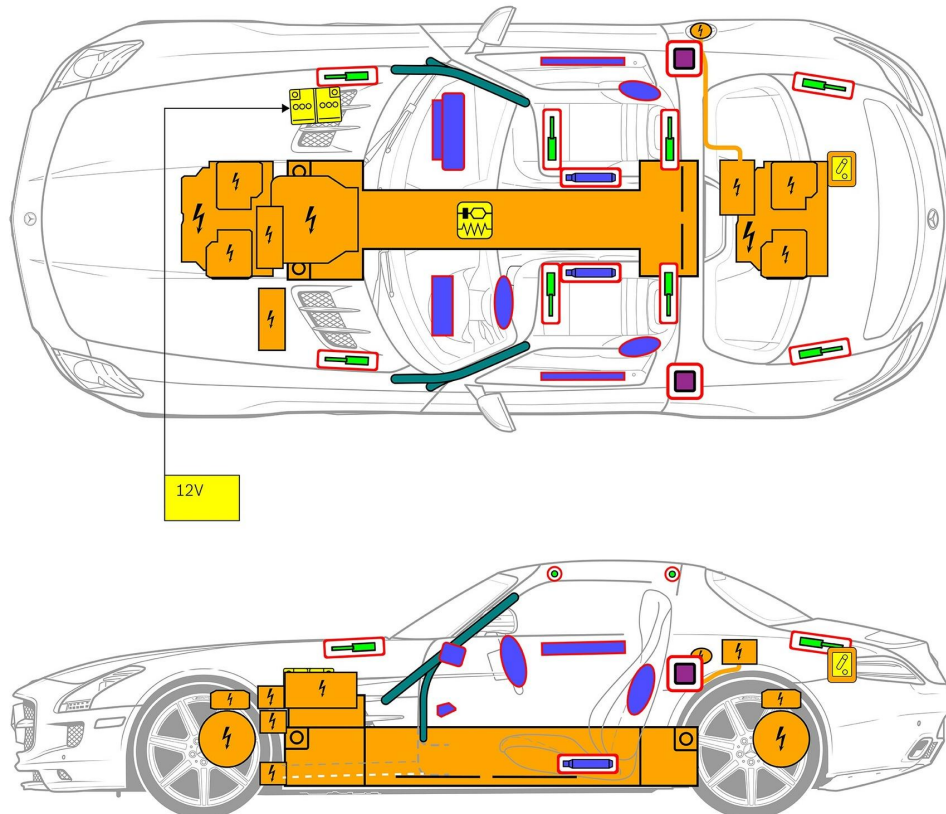


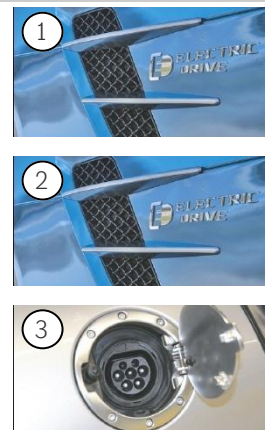

Märkus: Lisateabe saamiseks vaadake meie [päästetööde andmelehte](#).

1. Identifitseerimine / tunnustamine

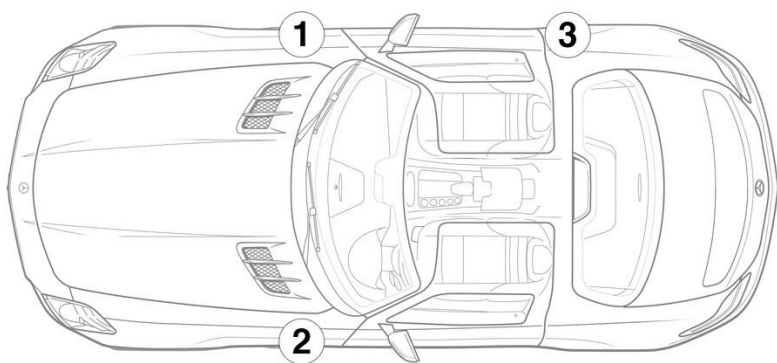

3. Otseste ohtude kõrvaldamine / ohutusreeglid

Kõrgepingesüsteemi inaktiveerimine

Kõigil muudel juhtudel tuleb kõrgepingesüsteem välja lülitada järgmiselt.

Suvand 1: Kõrgepinge väljalülitusseadis



The high-voltage disconnect device is located under the lid of the fuse and relay box on the rear panel in the boot.



Open lid (1) / Pull out switch (2) on fuse and relay box (3)



Tagamaks, et kõrgepingevõrgus pole jääkpinget, oodake pärast väljalülitamist ca 20 sekundit.



Passiivseid turvasüsteeme, nagu turvapadjad ja turvavöö eelpingutid, varustatakse jätkuvalt 12-voldise pardavõrgu vooluga.




12 V aku lahutamine

1. Eemaldage mootoriruumist 12-voldise aku kate.

2. Keerake 12-voldise aku miinuskaabel kruviühenduse juurest lahti ja kindlustage juhusliku kontakti vastu.



4. Juurdepääs sõitjatele

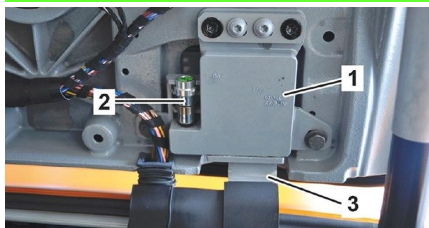

The SLS AMG is equipped with a safety system which uncouples the door hinges from the hinge arms when the vehicle comes to rest lying on its roof after an accident. Each door hinge (1) contains a pyrotechnic initiator (2) which is triggered by the restraint systems control unit. When the door lock is opened, the doors can be pulled off the hinge arms (3).