 



 
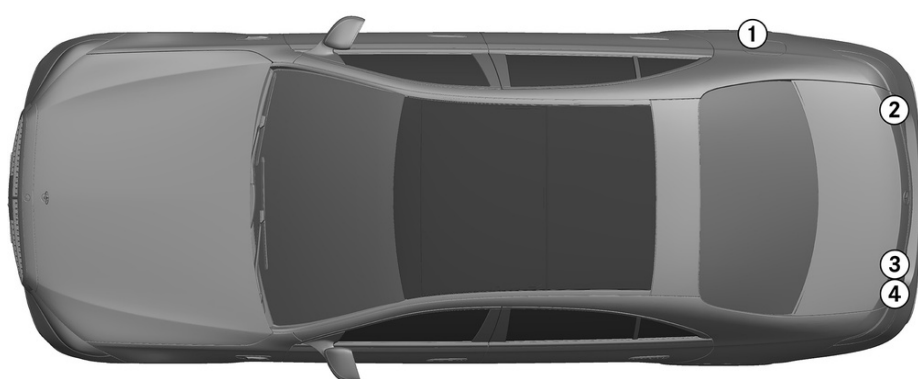


-  Zračni jastuk
-  Plinski generator
-  Zatezač sigurnosnog pojasa
-  SRS upravljački uređaj
-  Sustav aktivne zaštite pješaka
-  Plinsko-hidraulični podupirač / zategnuta opruga
-  Niskonaponski akumulator
-  Benzin spremnik za gorivo




1. Identifikacija

②
4MATIC④
S 450 / S 450L

2. Imobilizacija / stabilizacija / dizanje

Elektronička parkirna kočnica

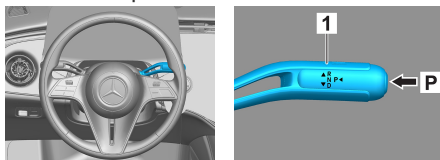


Pritisnite sklopku P na ručici mjenjača (1).
Automatski se aktivira elektronička parkirna
kočnica.

Mehanička parkirna kočnica



Električna parkirna kočnica (1)

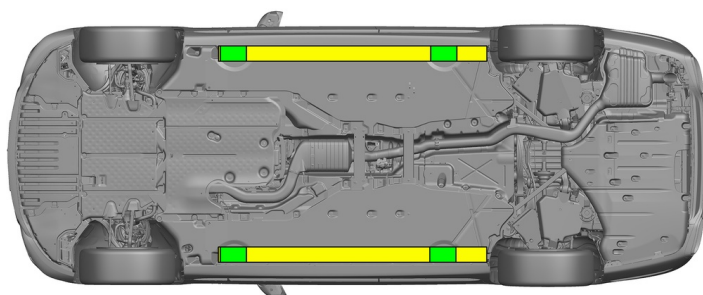

Prikladne podizne točke


 


Prikladne stabilizacijske točke na bočnoj strani

3. Sigurnosni propisi / izključivanje opasnosti

Isključivanje paljenja:

1. Pritisnite tipku za pokretanje/zaustavljanje bez aktivacije pogonske kočnice.
2. Pohranite elektronički ključ vozila na udaljenosti od najmanje 5 m.

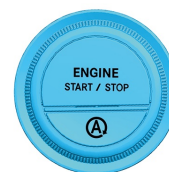

Samo zato što ne čujete zvukove motora, ne znači da je vozilo isključeno.



Vozilo je moguće ponovo pokrenuti dok ga ne stavite izvan pogona.



Odvajanje akumulatora od 12 V

1. Uklonite pokrov akumulatora od 12 V u prtljažniku.
2. Otpustite minus kabel akumulatora od 12 V na vijčanom spoju i osigurajte ga od neželjenog kontakta.



Pasivni sigurnosni sustavi (zračni jastuci i zatezači sigurnosnog pojasa) deaktivirani su nakon odvajanja baterije od 12 V




Baterija od 48 V će se deaktivirati čim se aktivira zračni jastuk.



Odvajanje akumulatora od 48 V

1. Prvo odvojite bateriju od 12 V.
2. Skinite pokrov s baterije od 48 V u prostoru motora.
3. Odvojite elektronički utikač (1) od baterije do 48 V.

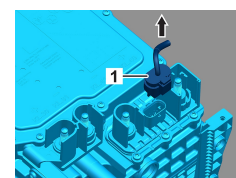


4. Pristup putnicima


Tijekom oslobađanja putnika potrebno je obratiti pozornost na komponente zaštitnog sustava (posebice pirotehničke elemente) u skladu s informacijama na stranici 1.




1. Ugurajte ravan, nemetalan predmet odozgo iza uvučene ručke vrata (1) i lagano je izbacite prema van. 2. Prihvatite ručku vrata (1) straga odozdo, povlačite je prema van dok ne osjetite otpor i držite u tom položaju.

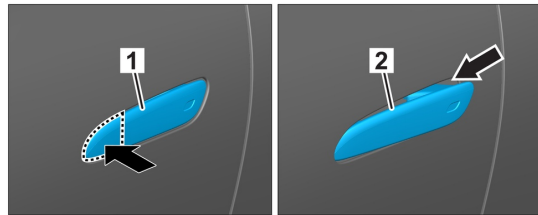


1. Pritisnite prednji rub kvake 2. Povucite kvaku prema van

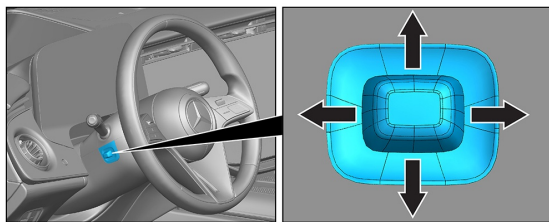

Podešavanje upravljača

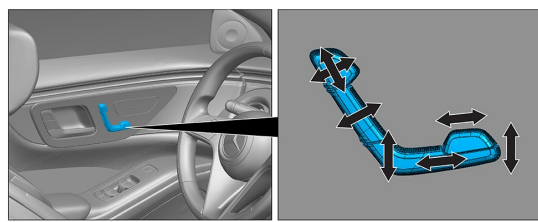

Podešavanje sjedala (električki)

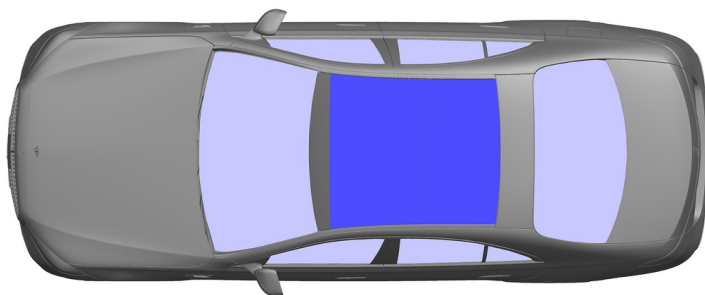

- VSG: višeslojno zaštitno staklo
- ESG: kaljeno staklo

5. Spremljena energija / tekućine / plinovi / kruta goriva

		12 V AGM
		48 V Li-ion
		76 L
		750 ± 10 g

6. U slučaju požara



Požar vozila ugasisite velikom količinom vode (H₂O).
Ohladite litij-ionski akumulator većom količinom vode (H₂O).


7. U slučaju uranjanja

Ne postoji opći znak upozorenja da je karoserija pod naponom. Nakon spašavanja vozila:

1. Pustite da voda izađe iz unutrašnjosti vozila.
2. Deaktivirajte unutarnju naponsku mrežu od 12 V / 48 V (vidi 3. poglavlje).



8. Transport / skladištenje / odvuci

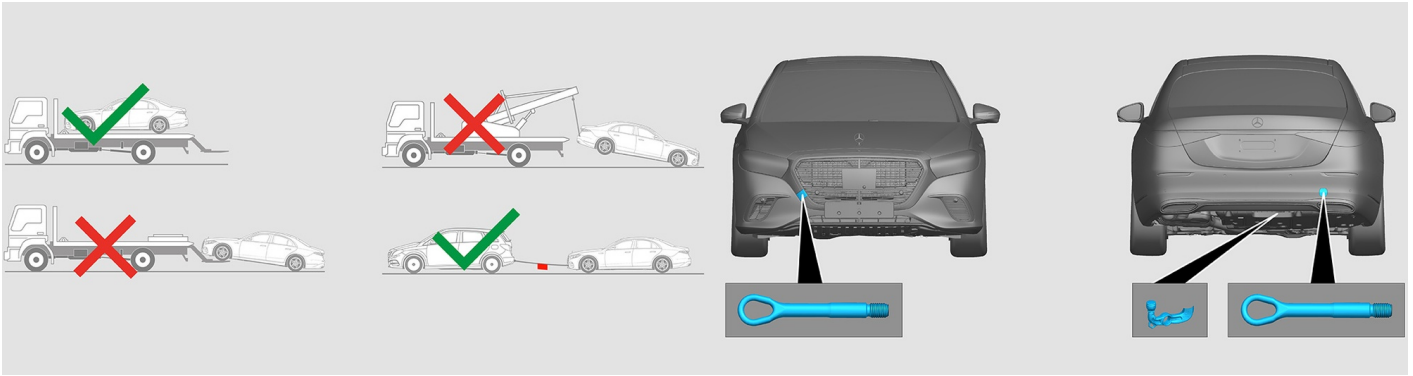

9. Vazne dodatne informacije

Dodatne informacije potražite u [Vodiču za službu za vuču osobnih motornih vozila](#).

Napomena: Dodatne informacije potražite u našem [Vodiču za spašavanje](#).

10. Objasnjenje piktograma



Vozilo na gorivo skupi-
ne tekućina 2



Opći znak upozorenja



Zapaljivo



Opasno za ljudsko
zdravlje



Korozivna tvar



Akutna toksičnost



Eksplziv



Uporaba vode prili-
kom gašenja požara



Uporaba suhe pjene
za gašenje požara



Uporaba vlažne pjene
za gašenje požara



Poklopac motora



Prtljažnik



Uklanjanje pametnog
ključa



Komponenta klima-ure-
đaja



Upozorenje, niska tem-
peratura