



① Engine compartment battery, left-hand drive

② Engine compartment battery, right-hand drive

③ Trunk battery (up to 08.2008)

④ Driver kneebag (as of 09.2008)

-  Zračni jastuk
-  Plinski generator
-  Zatezač sigurnosnog pojasa
-  SRS upravljački uređaj
-  Plinsko-hidraulični podupirač / zategnuta opruga
-  Područje visoke otpornosti
-  Niskonaponski akumulator
-  Benzin spremnik za gorivo

Napomena: Dodatne informacije potražite u našem [Vodiču za spašavanje](#).