


- ① Battery 12 V
- ② High-voltage battery
- ③ High-voltage charge socket
- ④ Onboard loadert
- ⑤ Additional battery

	Airbag		Gas generator		Seat belt tensioner		Gas-filled strut		Fuel tank
	Restraint systems control unit		12 V Battery		High-voltage battery		High-voltage components		High-voltage disconnect device
	Alternative high-voltage disconnect device								

Note: Please see our [emergency response guide](#) for more information



1. Identification / recognition

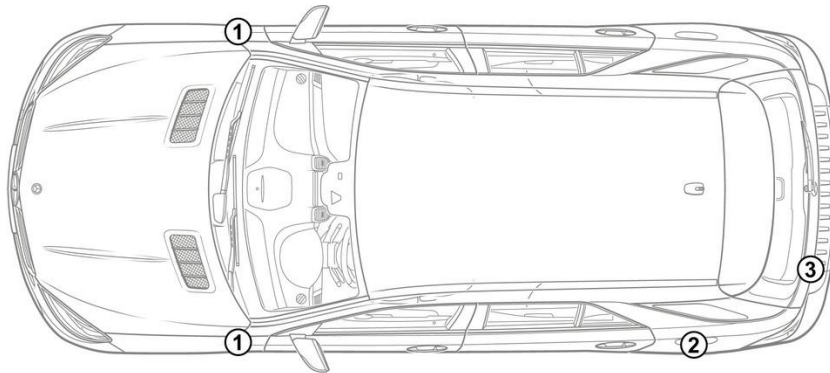


3. Disable direct hazards / safety regulations


Deactivation of the high-voltage system

In all other cases, the high-voltage system should be deactivated as follows:

Option 1: High-voltage disconnect

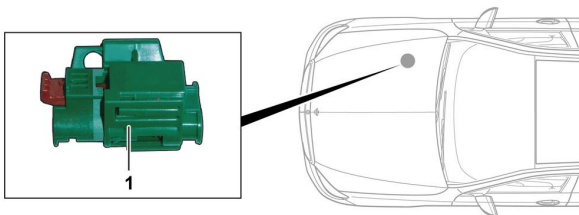


The high-voltage disconnect is located in the engine compartment on the passenger side.

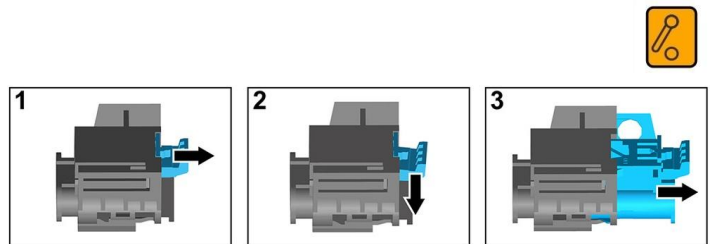

- (1) Pull the release
- (2) Push the release down
- (3) Pull out the switch

Option 2: Alternative high-voltage disconnect

The alternative high-voltage disconnect is located under the cover of the fuse box in the cockpit on the driver's side. It is indicated with a sign.

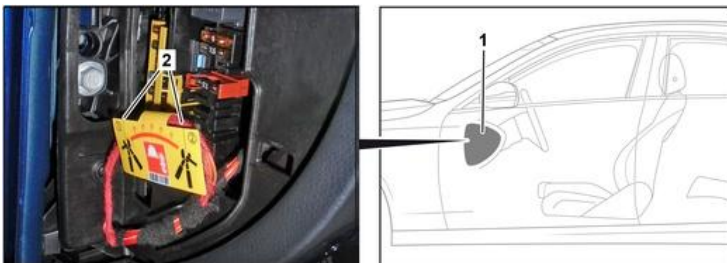

Remove the cover (1). Cut the cable at the marked point (2).



Disconnecting the 12 V battery

- 1. Remove the cover from the 12-volt battery.
- 2. Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.