
 








① As of 2001

-  Airbag
-  Gas generator
-  Seat belt pretensioner
-  SRS control unit
-  Gas strut / Pre-loaded spring
-  Low-voltage battery
-  Petrol fuel tank

 
Note: Please see our [emergency response guide](#) for more information



### 1. Identification / recognition

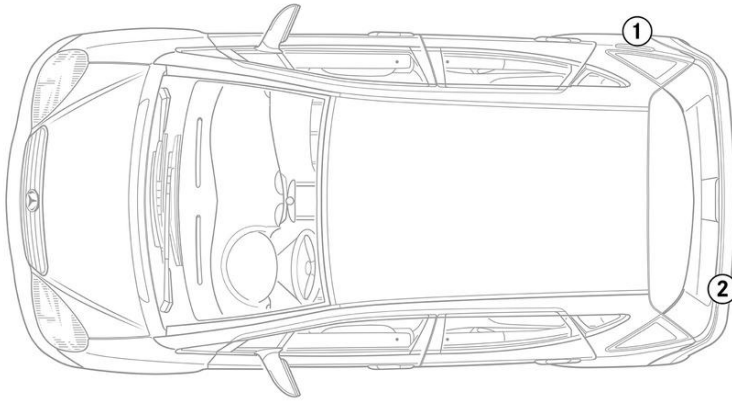

### 2. Immobilisation / stabilisation / lifting

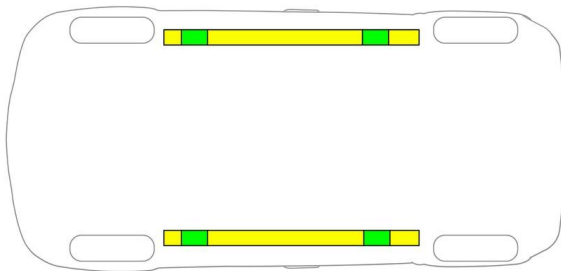

Suitable lifting points



Suitable stabilisation points on the side

### 3. Disable direct hazards / safety regulations



#### Disconnecting the 12 V battery

1. Remove the cover from the 12-volt battery.
2. Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.

### 5. Stored energy / liquids / gases / solids



### 6. In case of fire



Use large volumes of water (H<sub>2</sub>O) to extinguish a vehicle fire.


### 7. In case of submersion

There is no risk of voltage in the bodywork. After recovery of the vehicle:

1. Allow the water to drain out of the interior.
2. Commence deactivation of the 12 V/48 V electrical system (see Section 3).



### 8. Towing / transportation / storage

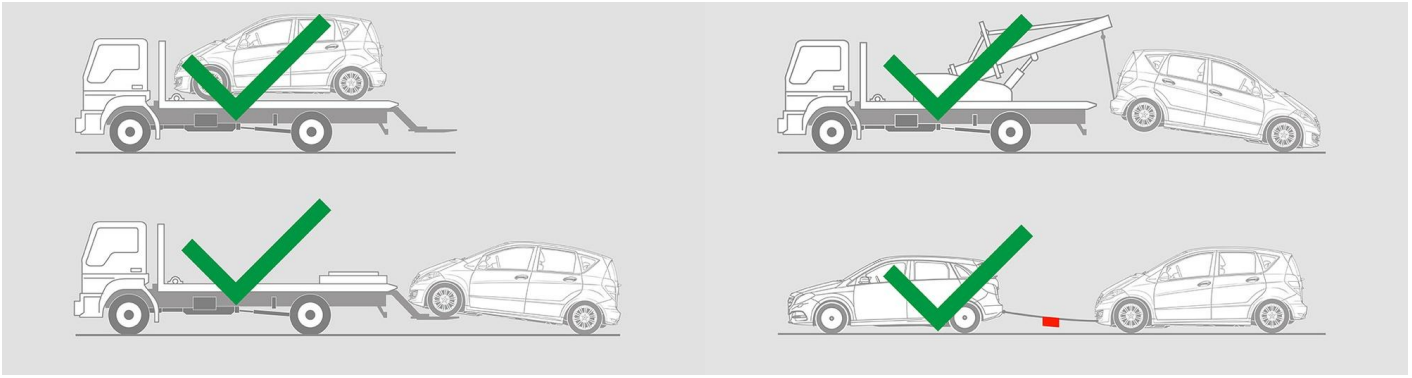

### 9. Important additional information

You can find more information in the [Guidelines for car towing services](#).

### 10. Explanation of pictograms used



Vehicle on fuel of li-  
quid group 1



Vehicle on fuel of li-  
quid group 2



General warning sign



Flammable



Hazardous to the hu-  
man health



Corrosives



Acute toxicity



Use water to extin-  
guish the fire



Use dry foam to extin-  
guish the fire



Use wet foam to ex-  
tinguish the fire