

- ① Battery 12 V
- ② High-voltage battery
- ③ HV charge socket
- ④ High-voltage disconnect device
- ⑤ Alternative high-voltage disconnect device

Legend


- | | | | |
|--------------------------------|--|----------------------|-------------------------|
| Airbag | Gas generator | Seat belt tensioner | Gas-filled strut |
| Restraint systems control unit | 12 V Battery | High-voltage battery | High-voltage components |
| High-voltage disconnect device | Alternative high-voltage disconnect device | | |

Note

Further information is available in our [Guidelines for Car Rescue Crews](#).

High-voltage disconnect device

The high-voltage disconnect device is located behind the side panel of the instrument panel on the left (viewed in the direction of travel). It is marked with a symbol.

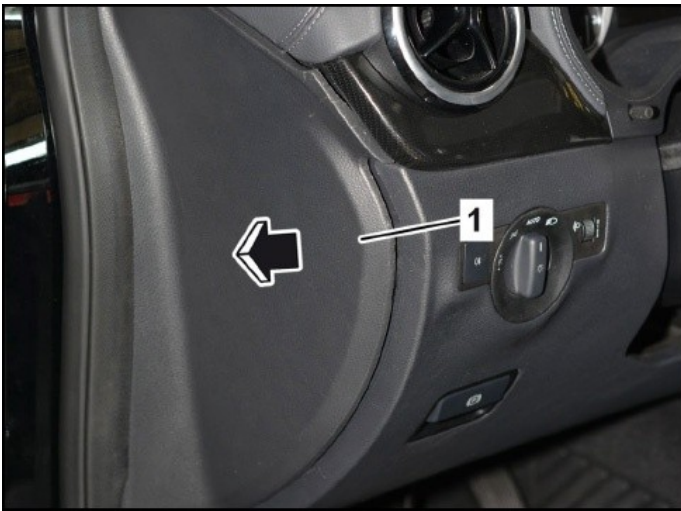

Remove side panel (1) of instrument panel / Disconnect plug (2)

Alternative high-voltage disconnect device


The alternative high-voltage disconnect device is located behind the footwell trim on the passenger side. It is marked with an information label.



Information label on alternative high-voltage disconnect device


Note

The alternative high-voltage disconnect device is only to be operated when access to the high-voltage disconnect device in the instrument panel is not possible.

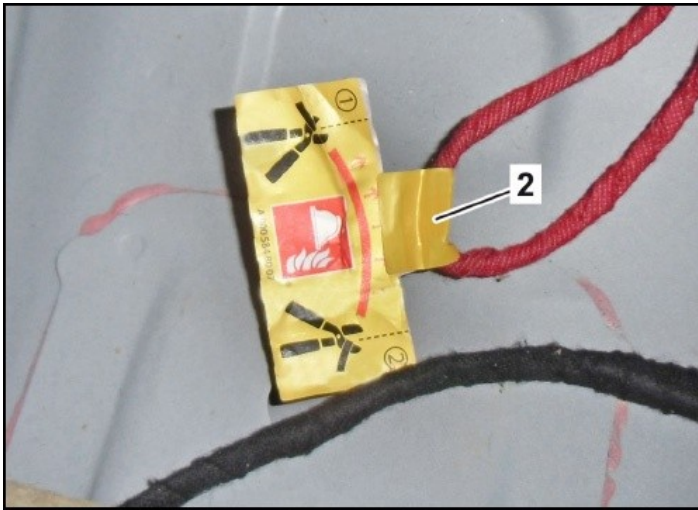

Fold back the footwell trim (1) / Sever the line at the marked point (2)

Vehicle identification

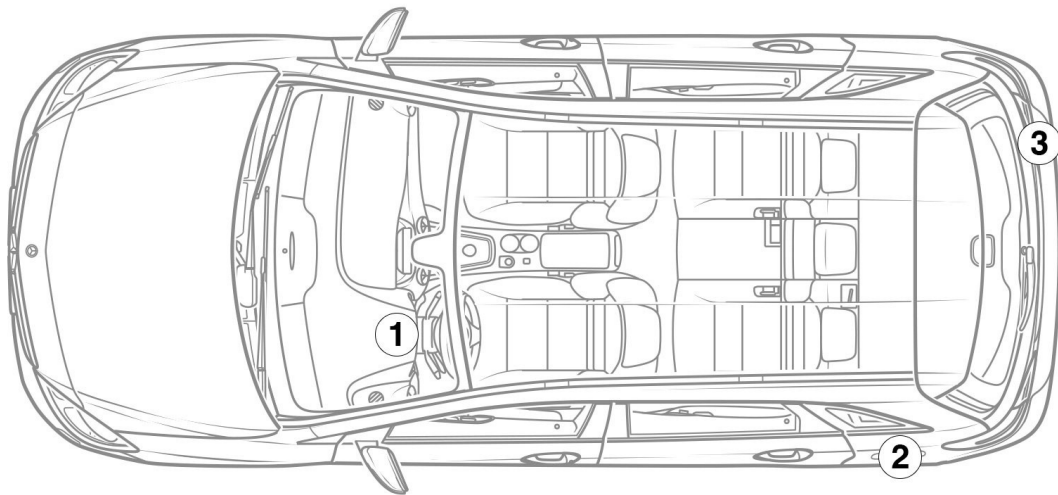

① Instrument cluster

② HV charge socket

③ Right of liftgate

