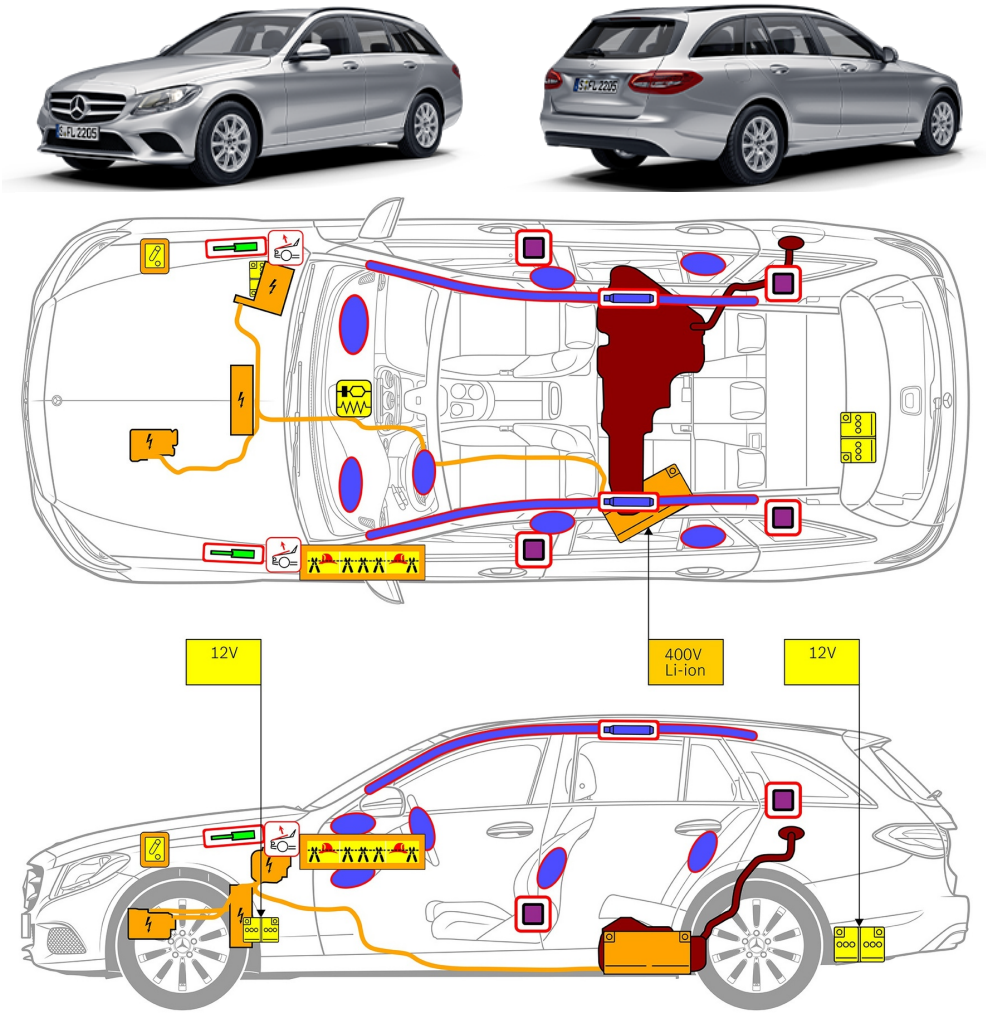

Airbag

Gas generator

Seat belt pretensioner

SRS control unit

Active pedestrian protection system

Gas strut / Preloaded spring

Low-voltage battery

Diesel Fuel tank

Battery pack, High-voltage

High voltage power cable

High voltage component

Cable cut

Low voltage device that disconnects high voltage

Note: Please see our emergency response guide for more information

1. Identification / recognition

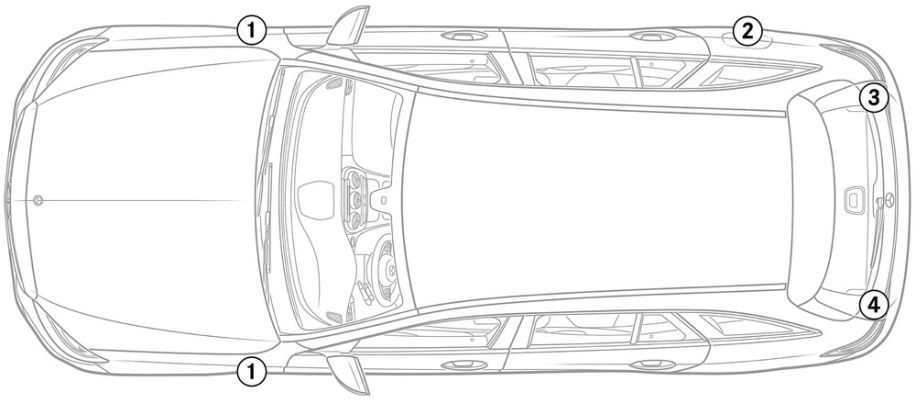

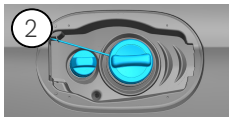

3. Disable direct hazards / safety regulations

Deactivation of the high-voltage system

In all other cases, the high-voltage system should be deactivated as follows:

Option 1: High-voltage disconnect

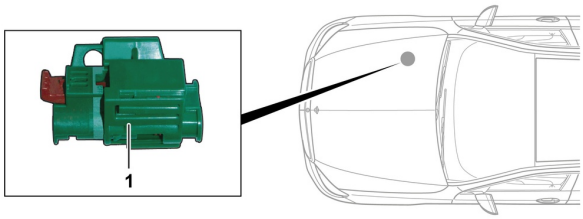

The high-voltage disconnect is located in the engine compartment on the passenger side.

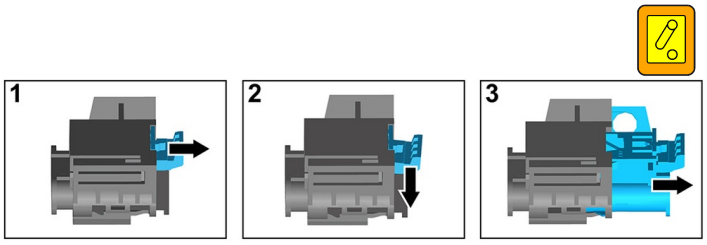

(1) Pull the release
(2) Push the release down
(3) Pull out the switch

Option 2: Alternative high-voltage disconnect

The alternative high-voltage disconnect is located under the cover of the fuse box in the cockpit on the driver's side.
It is indicated with a sign.

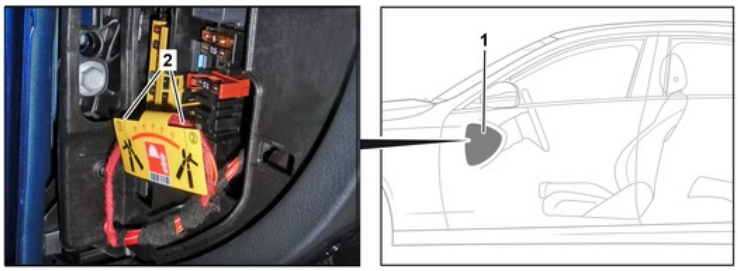

Remove the cover (1). Cut the cable at the marked point (2).

Disconnecting the 12 V battery

1. Remove the cover from the 12-volt battery.
2. Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.