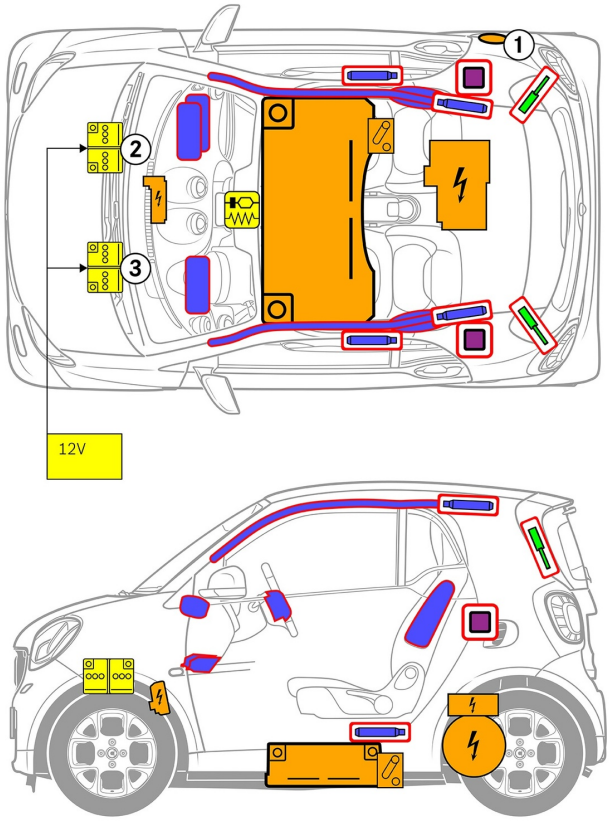

① High-voltage charge socket

② Left-hand drive

③ Right-hand drive

Airbag

Gas generator

Seat belt pretensioner

SRS control unit

Gas strut / Preloaded spring

Low-voltage battery

Battery pack, High-voltage

High voltage component

High voltage device that disconnects high voltage

Note: Please see our emergency response guide for more information

1. Identification / recognition

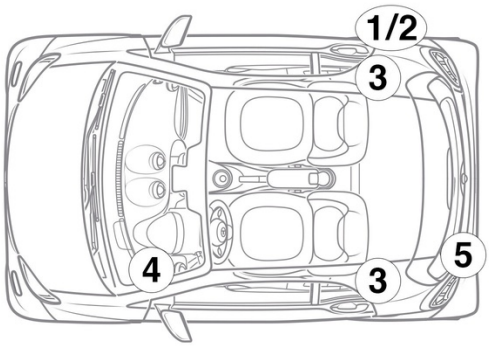

3. Disable direct hazards / safety regulations

Deactivation of the high-voltage system

In all other cases, the high-voltage system should be deactivated as follows:

High-voltage disconnect

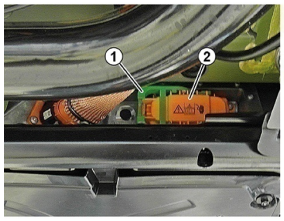

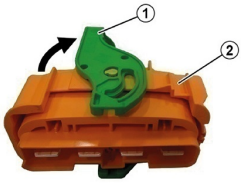

The high-voltage disconnect device is located on the underside of the high-voltage battery on the right at the rear.

Open lock (1) on connector (2) / Unplug connector (2) from high-voltage battery

In order to ensure that there is no longer any residual voltage in the high-voltage system, wait approx. 20 seconds after switching it off.

The passive safety systems such as airbags and seat belt pretensioners will continue to be supplied with power by the 12-volt electrical system.

Disconnecting the 12 V battery

1. Remove the cover from the 12-volt battery.
2. Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.