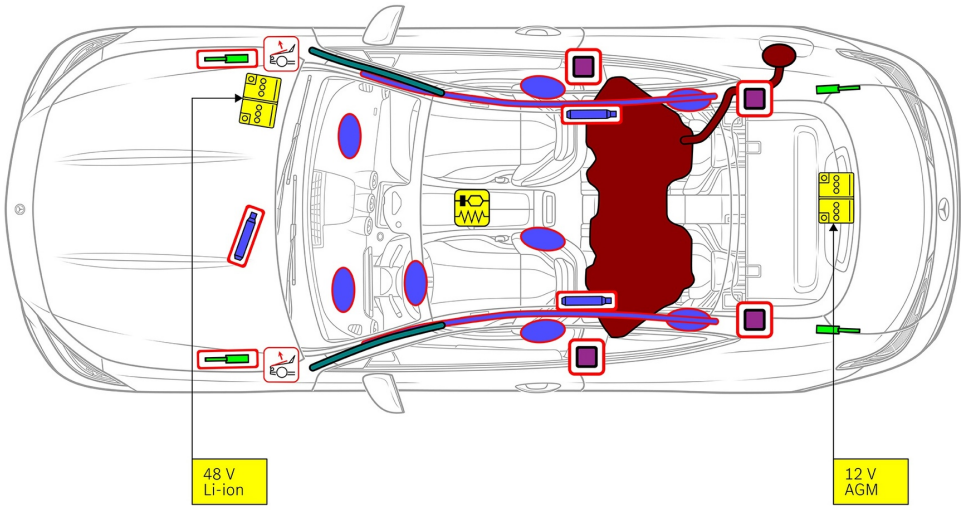

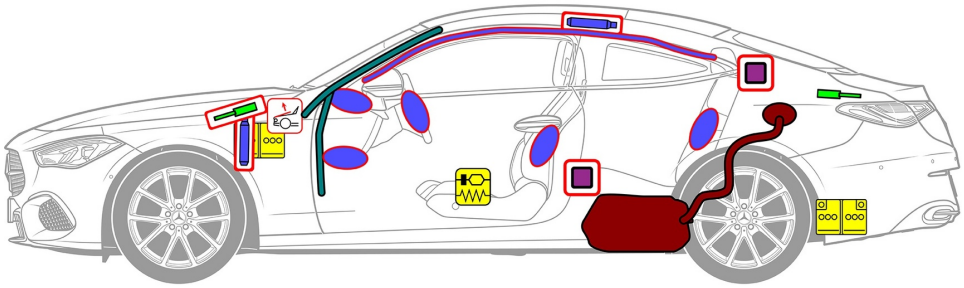

Airbag

Gas generator

Seat belt pretensioner

SRS control unit

Active pedestrian protection system

Gas strut / Preloaded spring

High strength zone

Low-voltage battery

Petrol fuel tank

1. Identification / recognition

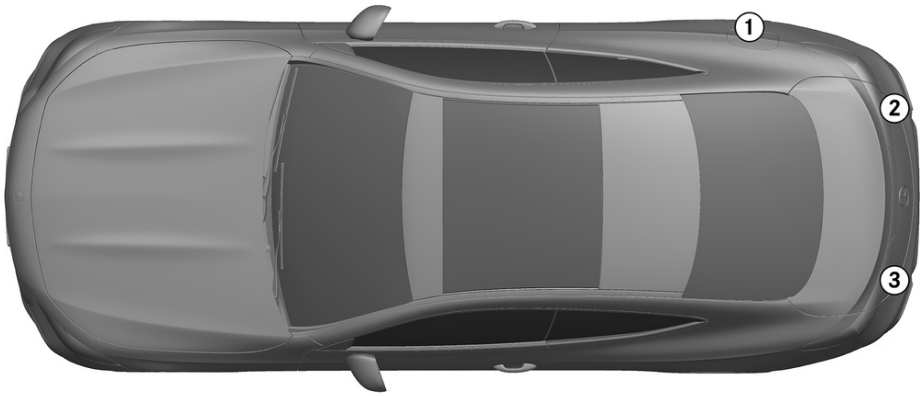

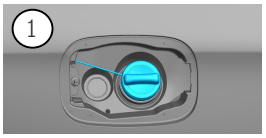

2

4MATIC

3

CLE 300

2. Immobilisation / stabilisation / lifting

Parking brake

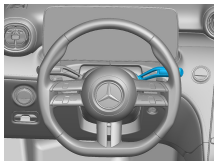

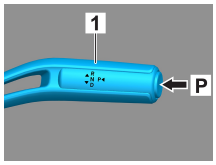

Press the P switch on the gear selector (1). The parking brake is automatically activated.

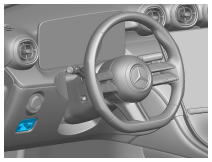

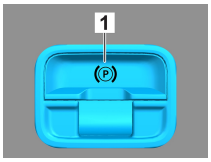

Electric parking brake (1)

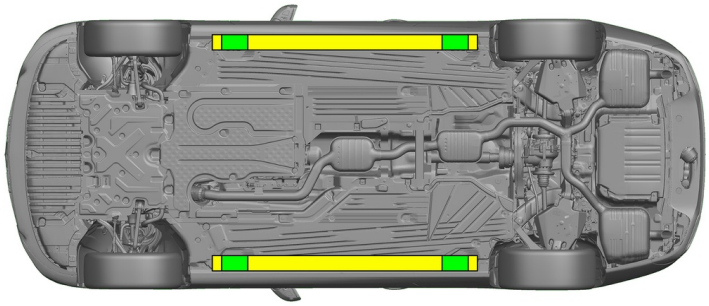

Suitable lifting points

Suitable stabilisation points on the side

3. Disable direct hazards / safety regulations

Switch off the ignition:

1. Press the START/STOP button without actuating the service brake.
2. Keep the electronic vehicle key at a distance of at least 5 m.



Disconnecting the 12 V battery

1. Remove the cover from the 12-volt battery in the boot.
2. Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.

The passive safety systems (airbags and seat belt pretensioners) are deactivated after disconnecting 12V battery.

10 seconds after disconnecting the 12V battery, the 48V system is automatically deactivated.

Disconnecting the 48 V battery

1. Disconnect the negative cable of the 48-volt battery at the screw connection and secure it against unintentional contact.

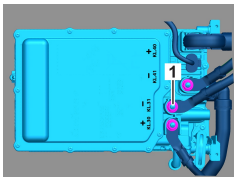

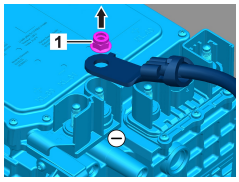

4. Access to the occupants

When freeing the occupants, areas of the bodywork which are made from high-strength steels and the components of the restraint systems (in particular pyrotechnic elements) must be taken into consideration in accordance with the information on page 1.

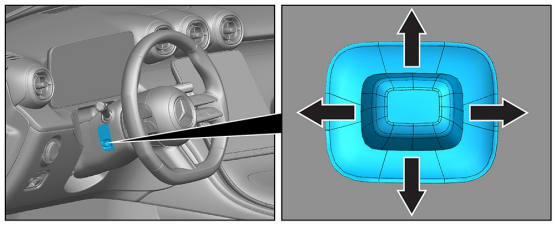

Steering wheel adjustment

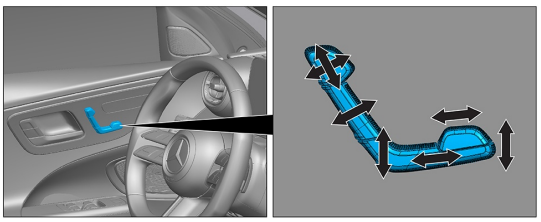

Seat adjustment (electric)

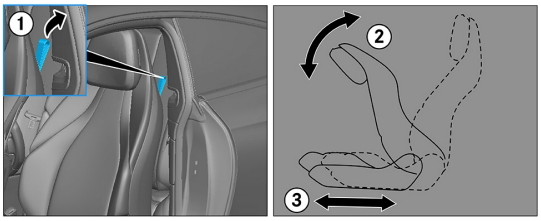

Folding front seat backrest

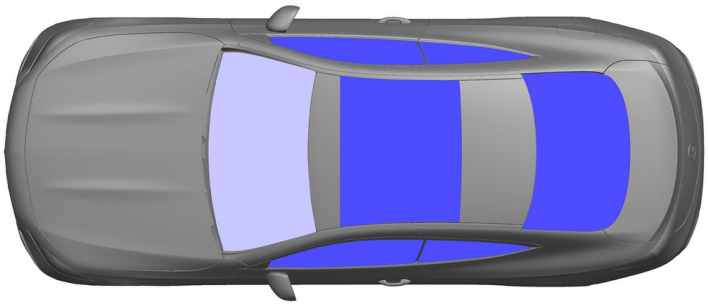

VSG: Laminated safety glass

ESG: Tempered glass

5. Stored energy / liquids / gases / solids

		48 V Li-ion
		12 V AGM
		66 L
		610 ± 10 g

6. In case of fire

Use large volumes of water (H_2O) to extinguish a vehicle fire.
Use large volumes of water (H_2O) to cool the Li-ion battery.

Warning: Ignition of the battery possible

7. In case of submersion

There is no risk of voltage in the bodywork. After recovery of the vehicle:

1. Allow the water to drain out of the interior.
2. Commence deactivation of the 12 V/48 V electrical system (see Section 3).

8. Towing / transportation / storage

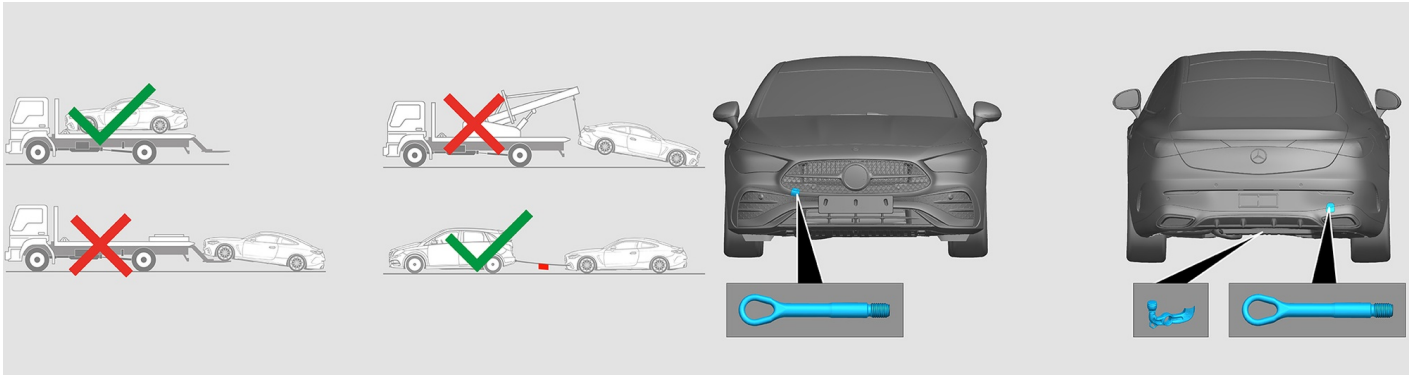

9. Important additional information

You can find more information in the Guidelines for car towing services.

Note: Please see our emergency response guide for more information

10. Explanation of pictograms used

- Vehicle on fuel of liquid group 2
- General warning sign
- Flammable
- Hazardous to the human health
- Corrosives
- Acute toxicity
- Explosive
- Use water to extinguish the fire
- Use dry foam to extinguish the fire
- Use wet foam to extinguish the fire
- Bonnet
- Boot
- Remove smart key
- Air-conditioning component
- Warning; low temperature