


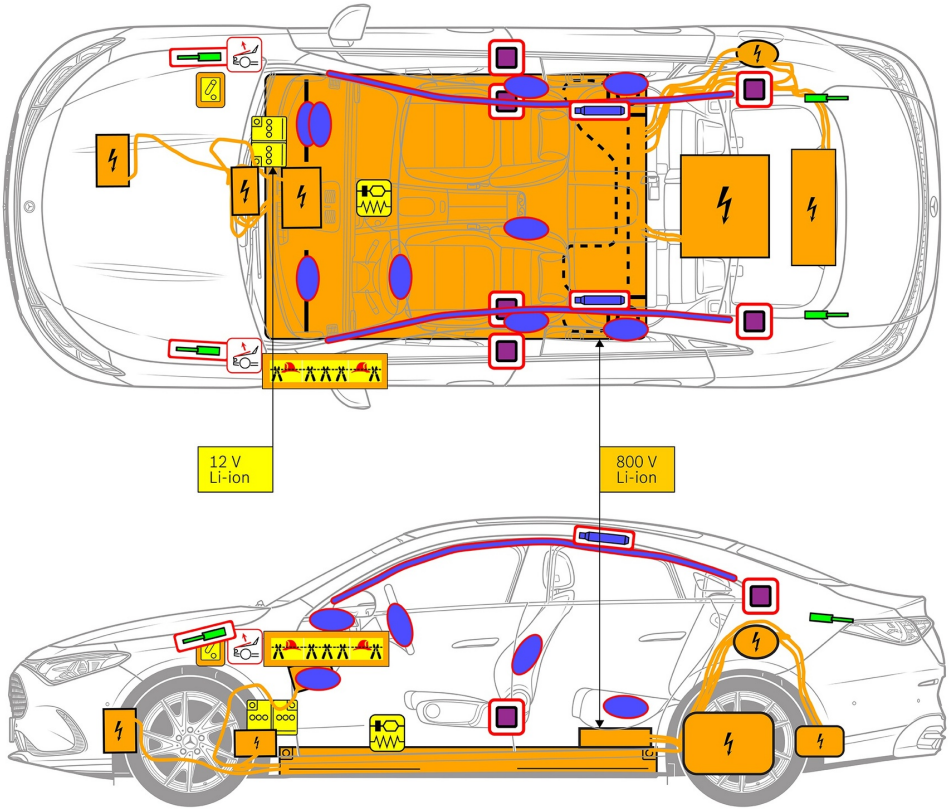

Airbag

Gas generator

Seat belt pretensioner

SRS control unit

Active pedestrian protection system

Gas strut / Preloaded spring

Low-voltage battery

Battery pack, High-voltage


High voltage power cable


High voltage component

Cable cut

Low voltage device that disconnects high voltage


1. Identification / recognition

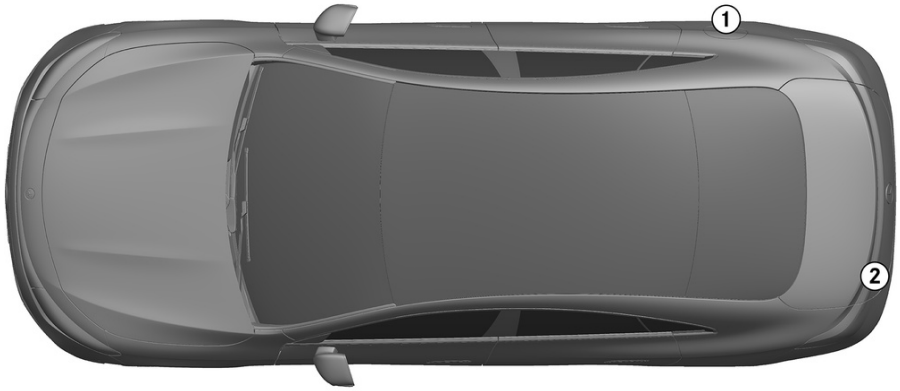


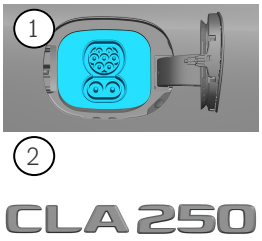


2. Immobilisation / stabilisation / lifting


Parking brake

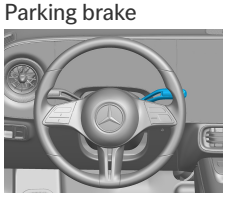

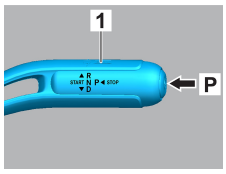


Press the P switch on the gear selector (1). The parking brake is automatically activated.

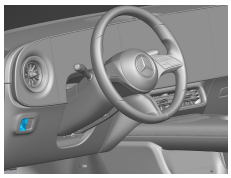

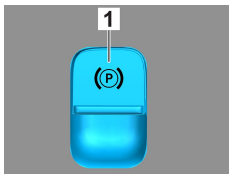

Electric parking brake (1)

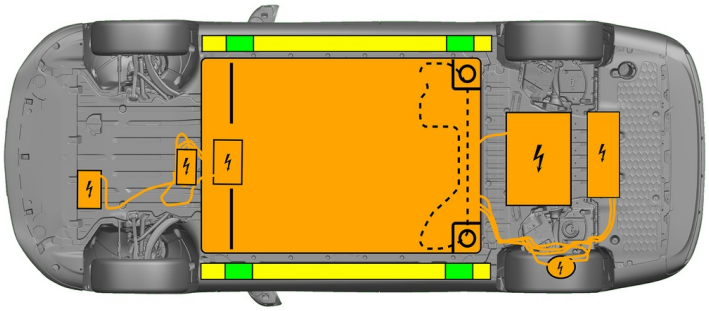

Suitable lifting points

Suitable stabilisation points on the side


High-voltage battery


Additional deformation of the door sills and the underbody (e.g. through support with hydraulic equipment) must be avoided during the rescue.

3. Disable direct hazards / safety regulations

Switch off the ignition:

1. Switch off the ignition: Press "START/STOP" on the selector lever.
2. Keep the electronic vehicle key at a distance of at least 5 m.



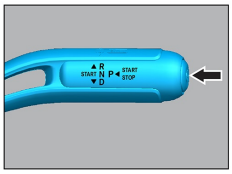

Lack of engine noise does not mean vehicle is off: Silent movement or instant restart capability exists until vehicle is fully shut down. Wear appropriate ppe.

A restart is possible until the vehicle is switched off.


Deactivation of the high-voltage system

The high-voltage system is automatically switched off in the event of accidents in which the airbags and seat belt pretensioners trigger.




In all other cases, the high-voltage system should be deactivated as follows:

Option 1: High-voltage disconnect

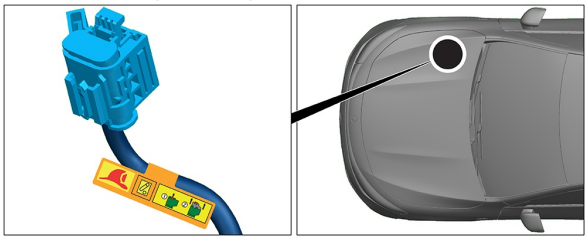


The high-voltage disconnect is located in the engine compartment on the passenger side.

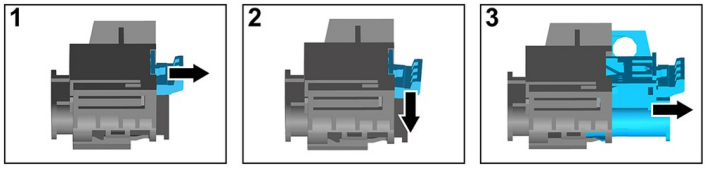

(1) Pull the release
(2) Push the release down
(3) Pull out the switch

Option 2: Alternative high-voltage disconnect

The alternative high-voltage disconnect is located under the cover of the fuse box in the cockpit on the driver's side. It is indicated with a sign.

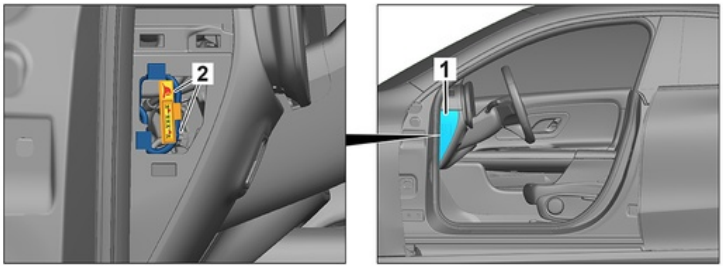

Remove the cover (1). Cut the cable at the marked point (2).

In order to ensure that there is no longer any residual voltage in the high-voltage system, wait approx. 20 seconds after switching it off.

The passive safety systems such as airbags and seat belt pretensioners will continue to be supplied with power by the 12-volt electrical system.


Disconnecting the 12 V battery

1. The 12-volt battery is located under the instrument panel.
2. Remove floor mat (1) and floor covering (2) from the front-passenger side footwell.
3. Disconnect negative cable (3) of 12-volt battery at threaded connection and secure it against unintentional contact.


The passive safety systems (airbags and seat belt pretensioners) are deactivated after disconnecting 12 V battery.

4. Access to the occupants


When rescuing the vehicle occupants, the components of the restraint systems (in particular pyrotechnic elements) must be taken into account in accordance with the information on page 1.

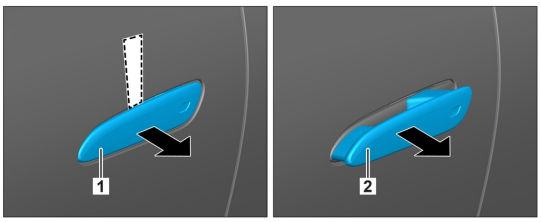


1. Slide a flat, non-metallic object behind the retracted door handle (1) from above and lever it slightly out. 2. Reach behind the door handle (2) from below and pull it out until you feel resistance, then hold.

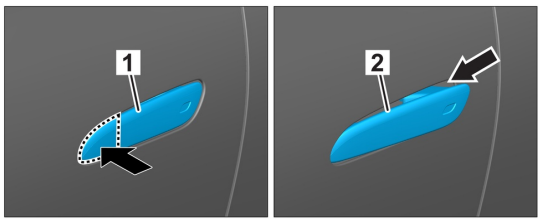


1. Press the front edge of the door handle 2. Pull the door handle outward

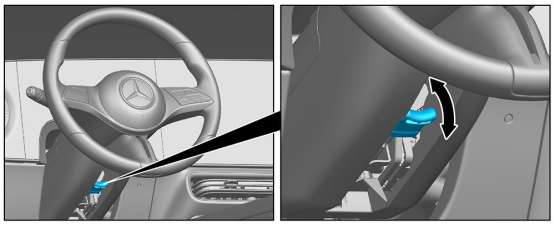


Steering wheel adjustment

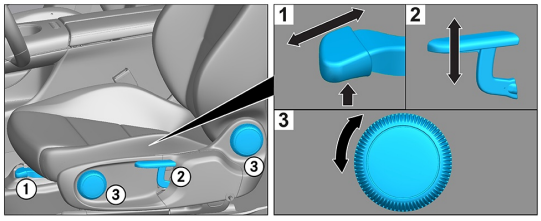


Seat adjustment (mechanical)

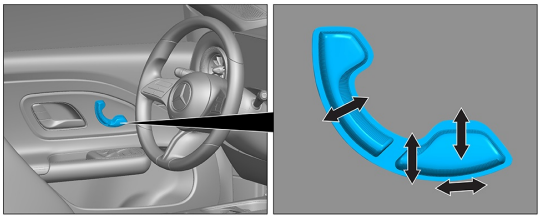

Seat adjustment (electric)

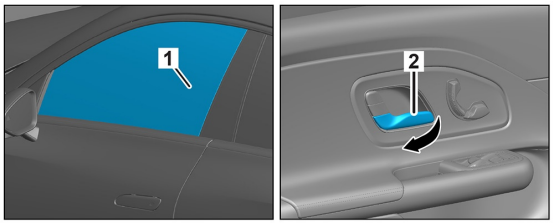

1. Access to the inside door handle via the side window (1) 2. Pull inside door handle (2)

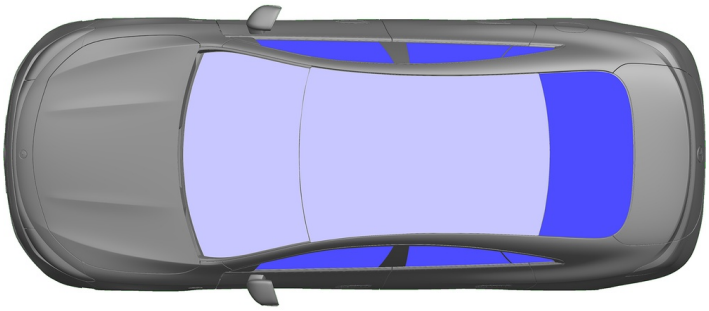

VSG: Laminated safety glass

ESG: Tempered glass

5. Stored energy / liquids / gases / solids

		12 V Li-ion
Li-ion		800 V
		800 ± 10 g

All high-voltage cables have orange insulation.

6. In case of fire

Use large volumes of water (H_2O) to extinguish a vehicle fire.
Use large volumes of water (H_2O) to cool the Li-ion battery.

Warning: Ignition of the battery possible


If coolant is leaking from the high-voltage battery, it may become unstable owing to thermal overload. Check the battery temperature with an IR thermal imager.

7. In case of submersion

There is no risk of voltage in the bodywork.
After recovery of the vehicle:
1. Allow the water to drain out of the interior.
2. Commence deactivation of the high-voltage system (see Section 3).

8. Towing / transportation / storage

Only transport the vehicle with both axles on a tow truck or car transporter.

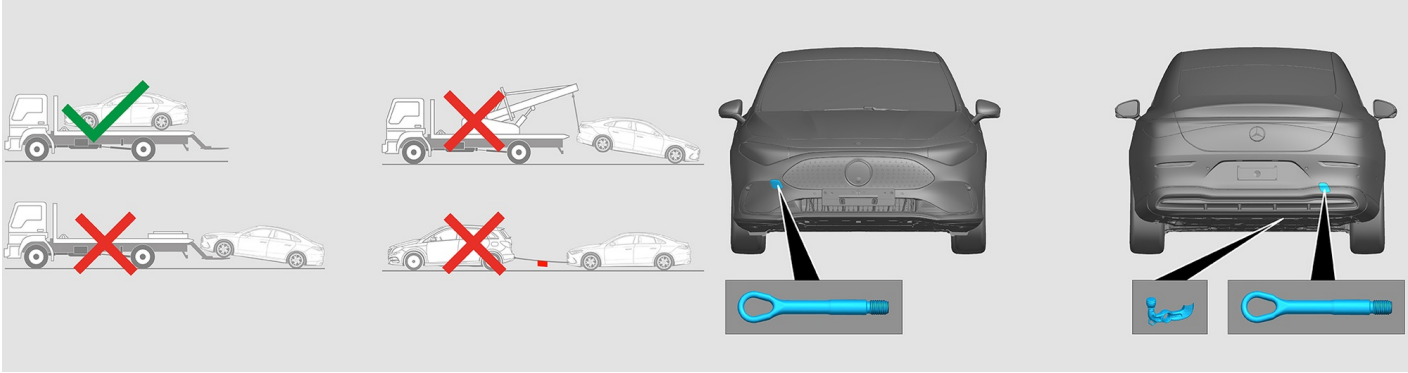

Maintain a safe distance from other vehicles.

Warning: Ignition of the battery possible

9. Important additional information

You can find more information in the Guidelines for car towing services.

Note: Please see our emergency response guide for more information

10. Explanation of pictograms used

Electric Vehicle
General warning sign
Warning, Electricity
Flammable
Hazardous to the human health
Corrosives
Acute toxicity
Explosive
Use water to extinguish the fire
Use thermal Infrared camera
Bonnet
Remove smart key
Air-conditioning component
Warning; low temperature