
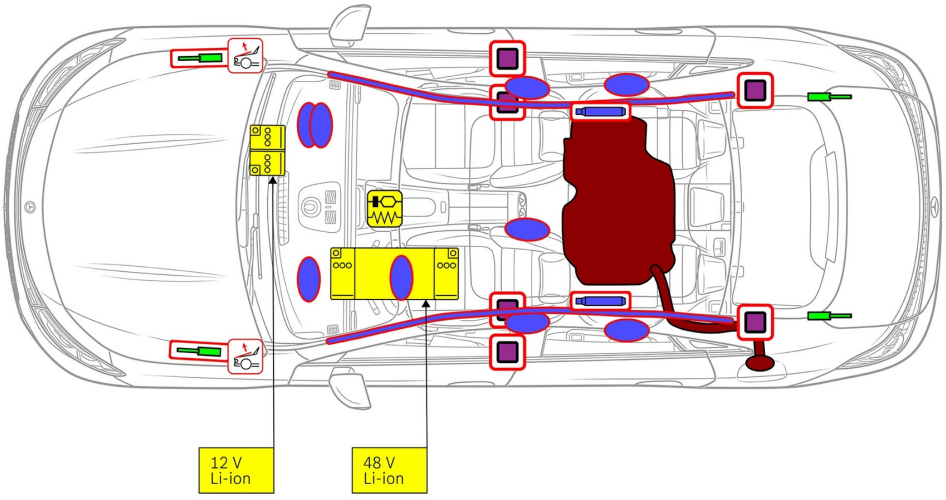


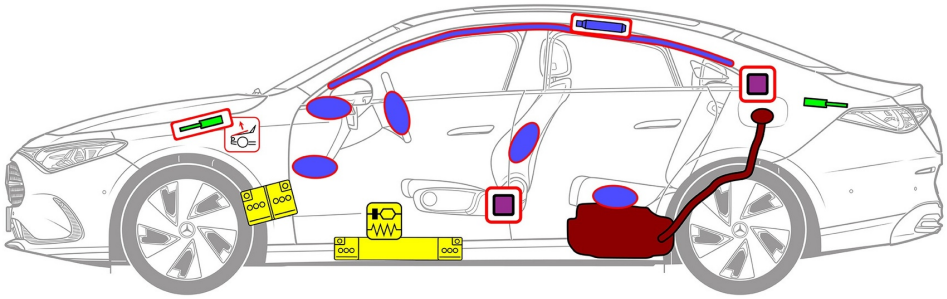

Airbag

Gas generator

Seat belt pretensioner

SRS control unit


Active pedestrian protection system


Gas strut / Preloaded spring

Low-voltage battery

Petrol fuel tank


## 1. Identification / recognition

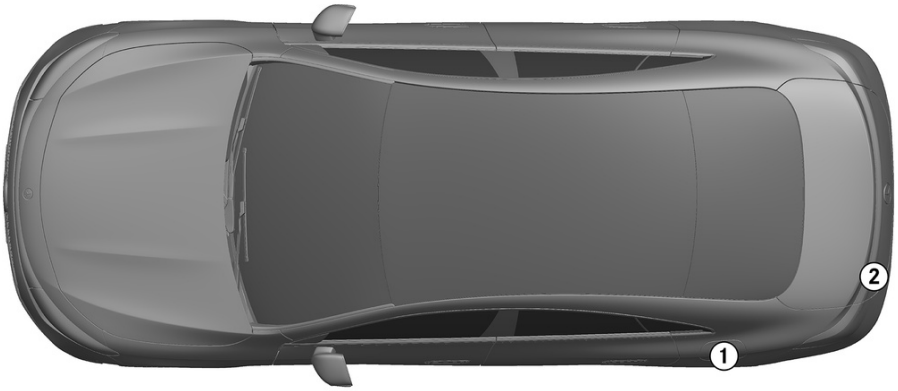


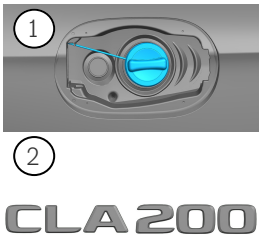

## 2. Immobilisation / stabilisation / lifting


Parking brake



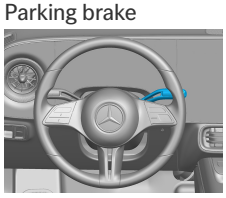


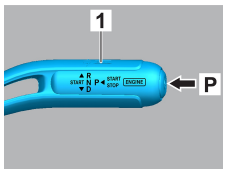
Press the P switch on the gear selector (1). The parking brake is automatically activated.

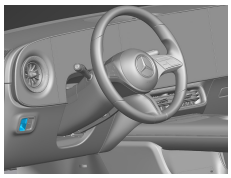

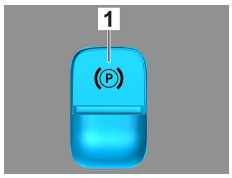


Electric parking brake (1)

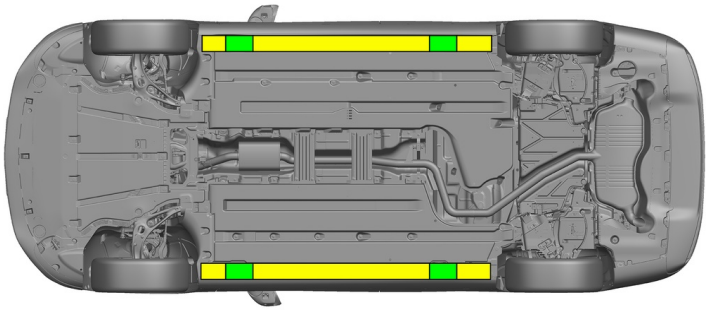


Suitable lifting points


Suitable stabilisation points on the side

## 3. Disable direct hazards / safety regulations

### Switch off the ignition:

1. Switch off the ignition: Press "START/STOP" on the selector lever.
2. Keep the electronic vehicle key at a distance of at least 5 m.



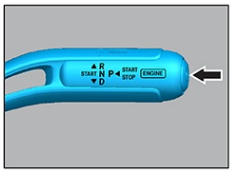The absence of engine noise does not mean that the vehicle is switched off.

A restart is possible until the vehicle is switched off.

### Disconnecting the 12 V battery

1. The 12-volt battery is located under the instrument panel.
2. Remove floor mat (1) and floor covering (2) from the front-passenger side footwell.
3. Disconnect negative cable (3) of 12-volt battery at threaded connection and secure it against unintentional contact.


The passive safety systems (airbags and seat belt pretensioners) are deactivated after disconnecting 12 V battery.


10 seconds after disconnecting the 12 V battery, the 48 V system is automatically deactivated.

The 48 V battery is deactivated as soon as the airbag deploys.

### Disconnecting the 48 V battery

1. The 48 V battery is located under the vehicle on the left side in the direction of travel.
2. Disconnect signal cable (1) from 48V battery.
3. Disconnect electrical cables (2) then (3) at the screw connection and secure it against unintentional contact.

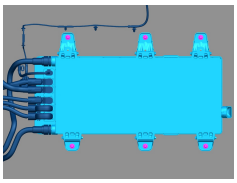

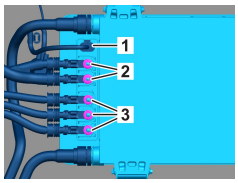



## 4. Access to the occupants


When rescuing the vehicle occupants, the components of the restraint systems (in particular pyrotechnic elements) must be taken into account in accordance with the information on page 1.





1. Slide a flat, non-metallic object behind the retracted door handle (1) from above and lever it slightly out. 2. Reach behind the door handle (2) from below and pull it out until you feel resistance, then hold.

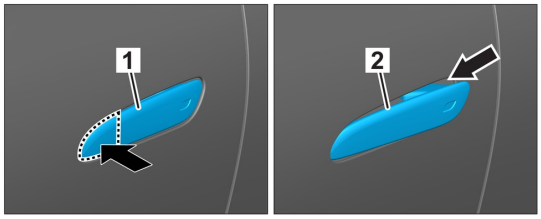



1. Press the front edge of the door handle 2. Pull the door handle outward

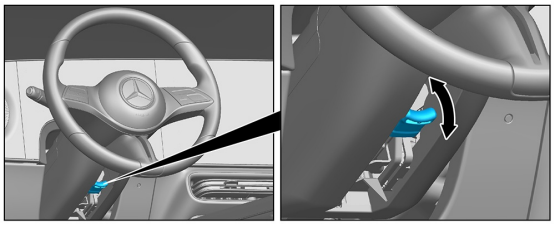


Steering wheel adjustment

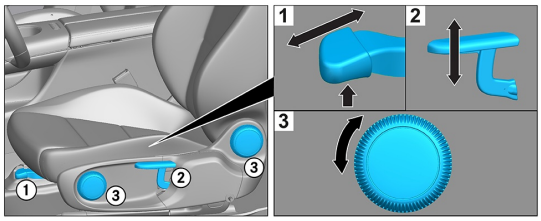



Seat adjustment (mechanical)

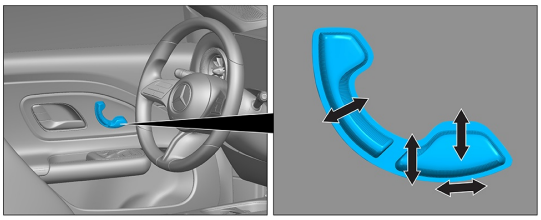

Seat adjustment (electric)

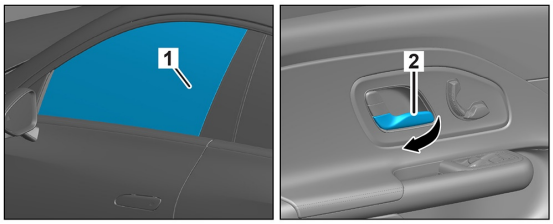


1. Access to the inside door handle via the side window (1) 2. Pull inside door handle (2)

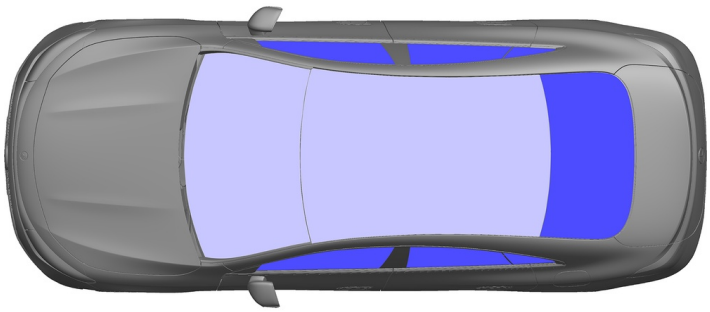

VSG: Laminated safety glass

ESG: Tempered glass

## 5. Stored energy / liquids / gases / solids

| | |
|---|---|
| | 48 V Li-ion |
| | 12 V Li-ion |
| | 43 L |
| | 630 ± 10 g |

## 6. In case of fire


Use large volumes of water ($H_2O$) to extinguish a vehicle fire.
Use large volumes of water ($H_2O$) to cool the Li-ion battery.

**Warning: Ignition of the battery possible**

## 7. In case of submersion

There is no risk of voltage in the bodywork. After recovery of the vehicle:
1. Allow the water to drain out of the interior.
2. Commence deactivation of the 12 V/48 V electrical system (see Section 3).

## 8. Towing / transportation / storage

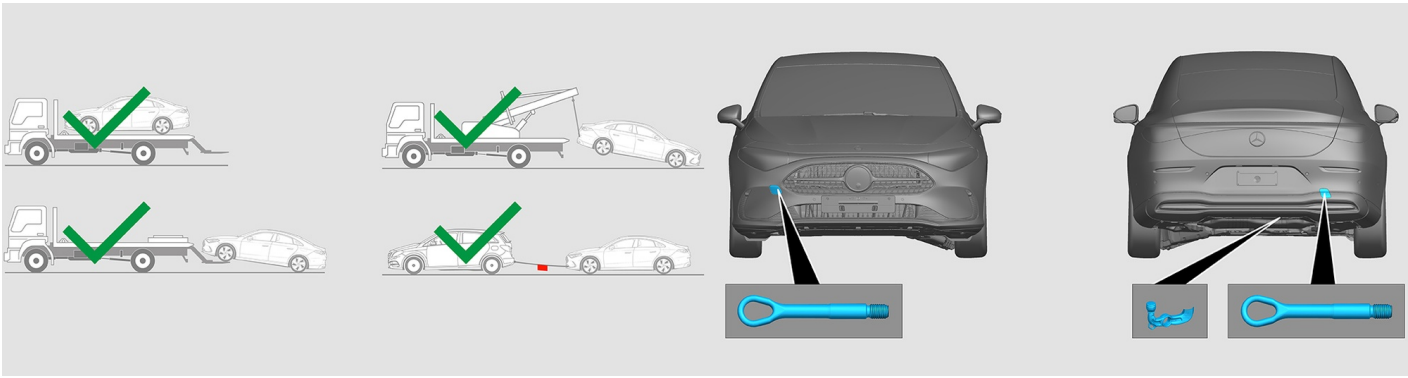

## 9. Important additional information

You can find more information in the Guidelines for car towing services.

**Note:** Please see our emergency response guide for more information

## 10. Explanation of pictograms used


Vehicle on fuel of liquid group 2


General warning sign


Flammable


Hazardous to the human health


Corrosives


Acute toxicity


Explosive


Use water to extinguish the fire



Use dry foam to extinguish the fire



Use wet foam to extinguish the fire


Remove smart key


Air-conditioning component


Warning; low temperature