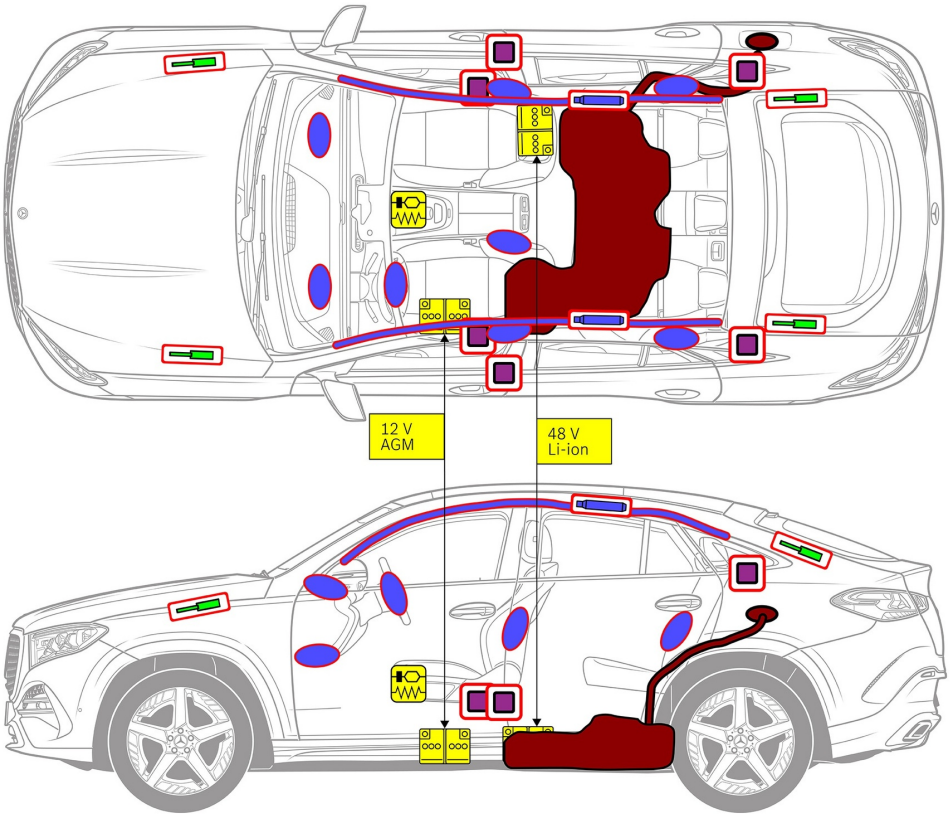

Airbag

Gas generator

Seat belt pretensioner

SRS control unit

Gas strut / Preloaded spring

Low-voltage battery

Petrol fuel tank

1. Identification / recognition

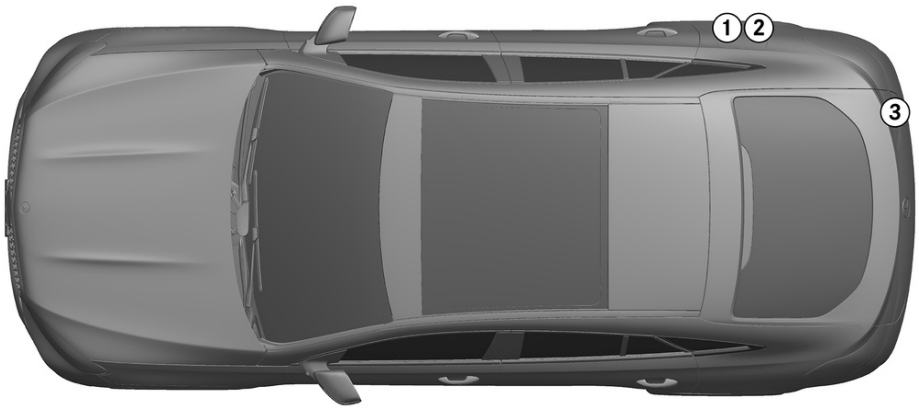

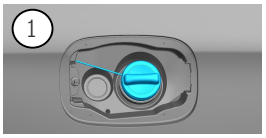

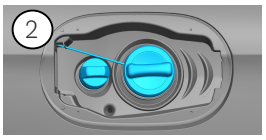

3

4MATIC

2. Immobilisation / stabilisation / lifting

Parking brake

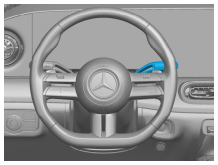

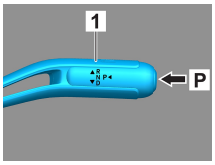

Press the P switch on the gear selector (1). The parking brake is automatically activated.

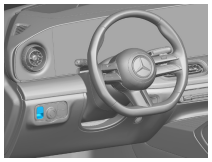

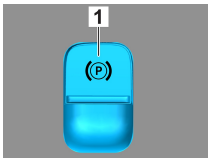

Electric parking brake (1)

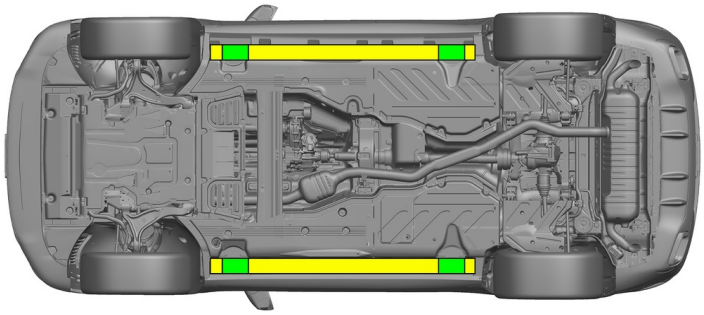

Suitable lifting points

Suitable stabilisation points on the side

3. Disable direct hazards / safety regulations

Switch off the ignition:

1. Press the START/STOP button without actuating the service brake.
2. Keep the electronic vehicle key at a distance of at least 5 m.

The absence of engine noise does not mean that the vehicle is switched off.

A restart is possible until the vehicle is switched off.

Disconnecting the 12 V battery

1. Remove the cover from the 12-volt battery.
2. Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.

The passive safety systems (airbags and seat belt pretensioners) are deactivated after disconnecting 12 V battery.

10 seconds after disconnecting the 12 V battery, the 48 V system is automatically deactivated.

The 48 V battery is deactivated as soon as the airbag deploys.

Disconnecting the 48 V battery

1. Disconnect the 12 V battery first.
2. Remove the cover above the 48 V battery.
3. Detach electronic plug (1) from 48 V battery.

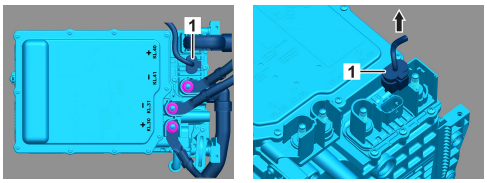

4. Access to the occupants

When rescuing the vehicle occupants, the components of the restraint systems (in particular pyrotechnic elements) must be taken into account in accordance with the information on page 1.

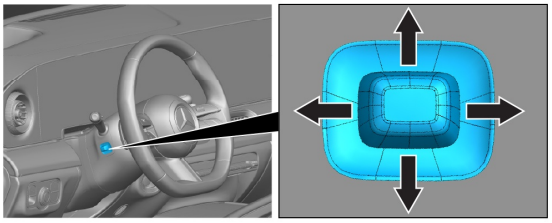

Steering wheel adjustment

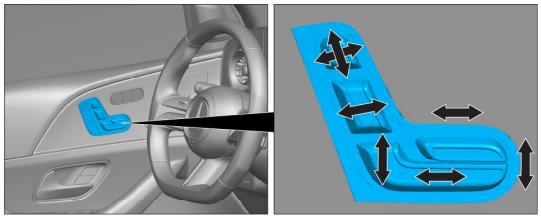

Seat adjustment (electric)

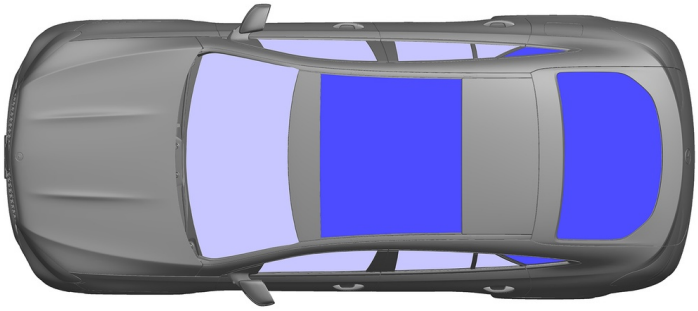

VSG: Laminated safety glass

ESG: Tempered glass

5. Stored energy / liquids / gases / solids

		12 V AGM
		48 V Li-ion
		85 L
		85 L
		660 ± 10 g

6. In case of fire

Use large volumes of water (H_2O) to extinguish a vehicle fire.
Use large volumes of water (H_2O) to cool the Li-ion battery.

7. In case of submersion

There is no risk of voltage in the bodywork. After recovery of the vehicle:

1. Allow the water to drain out of the interior.
2. Commence deactivation of the 12 V/48 V electrical system (see Section 3).

8. Towing / transportation / storage

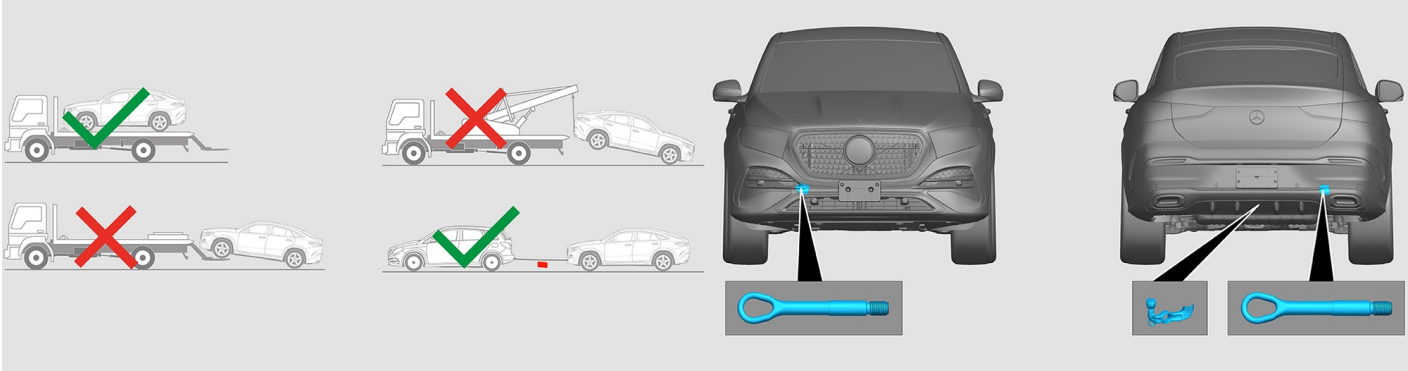

9. Important additional information

You can find more information in the Guidelines for car towing services.

Note: Please see our emergency response guide for more information

10. Explanation of pictograms used

Vehicle on fuel of liquid group 1

Vehicle on fuel of liquid group 2

General warning sign

Flammable

Hazardous to the human health

Corrosives

Acute toxicity

Explosive

Use water to extinguish the fire

Remove smart key

Air-conditioning component

Warning; low temperature