




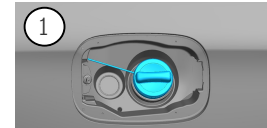
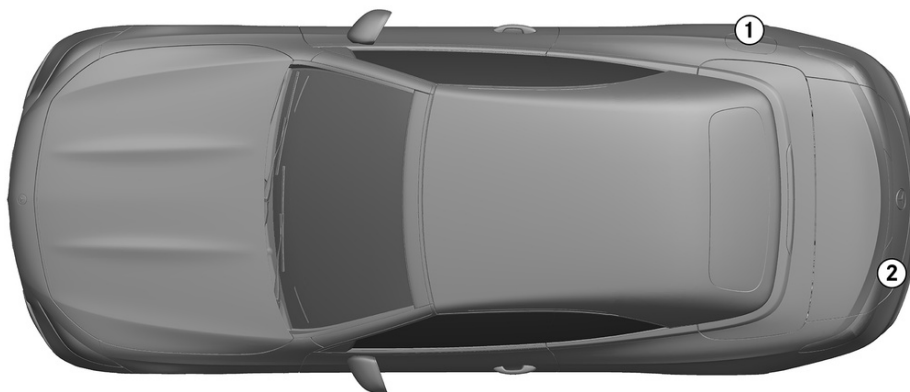


- | | | | | | | | | | |
|---|---------------------------------------|---|-------------------------------|---|------------------------|--|---------------------|---|-------------------------------------|
|  | Airbag |  | Gas generator |  | Seat belt pretensioner |  | SRS control unit |  | Active pedestrian protection system |
|  | Automatic roll-over protection system |  | Gas strut / Pre-loaded spring |  | High strength zone |  | Low-voltage battery |  | Petrol fuel tank |







1. Identification / recognition



2
CLE 180


2. Immobilisation / stabilisation / lifting

Parking brake

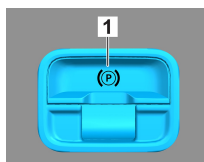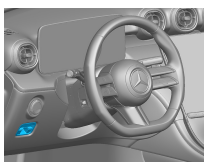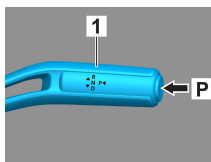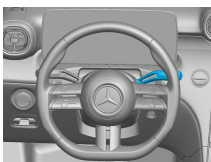

Press the P switch on the gear selector (1). The parking brake is automatically activated.

Electric parking brake (1)

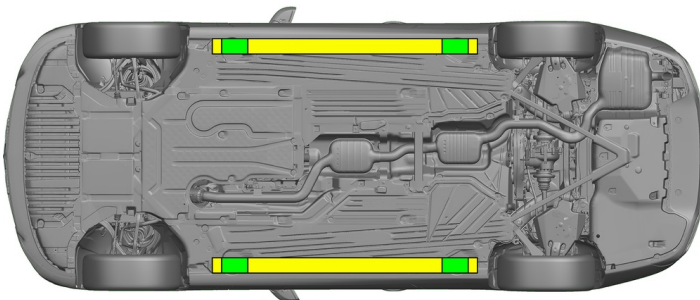

Suitable lifting points




Suitable stabilisation points on the side

3. Disable direct hazards / safety regulations

Switch off the ignition:

1. Press the START/STOP button without actuating the service brake.
2. Keep the electronic vehicle key at a distance of at least 5 m.

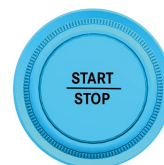

Disconnecting the 12 V battery

1. Remove the cover from the 12-volt battery in the boot.
2. Disconnect the negative cable of the 12-volt battery at the screw connection and secure it against unintentional contact.



The passive safety systems (airbags and seat belt pretensioners) are deactivated after disconnecting 12V battery.




10 seconds after disconnecting the 12V battery, the 48V system is automatically deactivated.



Disconnecting the 48 V battery


1. Disconnect the negative cable of the 48-volt battery at the screw connection and secure it against unintentional contact.

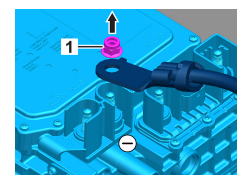




4. Access to the occupants


When freeing the occupants, areas of the bodywork which are made from high-strength steels and the components of the restraint systems (in particular pyrotechnic elements) must be taken into consideration in accordance with the information on page 1.

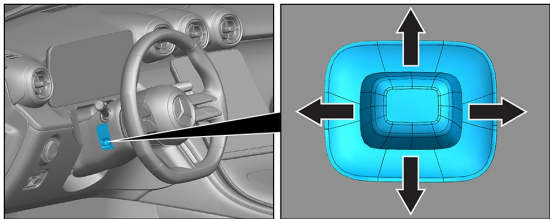


Steering wheel adjustment

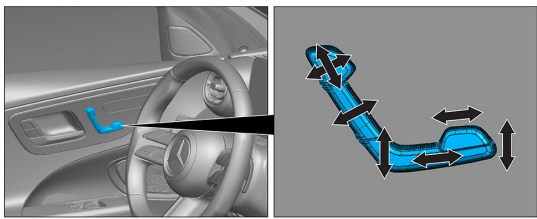

Seat adjustment (electric)

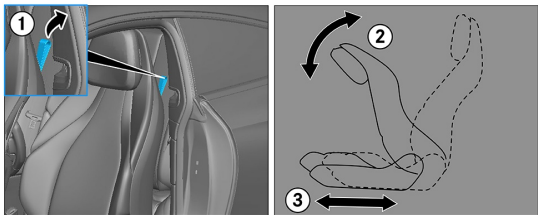

Folding front seat backrest

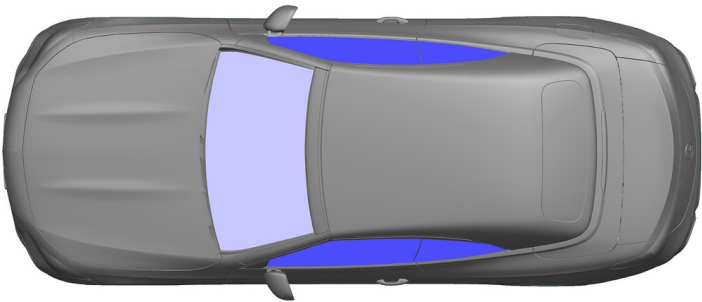

- VSG: Laminated safety glass
- ESG: Tempered glass

5. Stored energy / liquids / gases / solids

		48 V Li-ion
		12 V AGM
		66 L
		570 ± 10 g

6. In case of fire



Use large volumes of water (H₂O) to extinguish a vehicle fire.
Use large volumes of water (H₂O) to cool the Li-ion battery.



Warning: Ignition of the battery possible




7. In case of submersion

- There is no risk of voltage in the bodywork. After recovery of the vehicle:
1. Allow the water to drain out of the interior.
 2. Commence deactivation of the 12 V/48 V electrical system (see Section 3).



8. Towing / transportation / storage

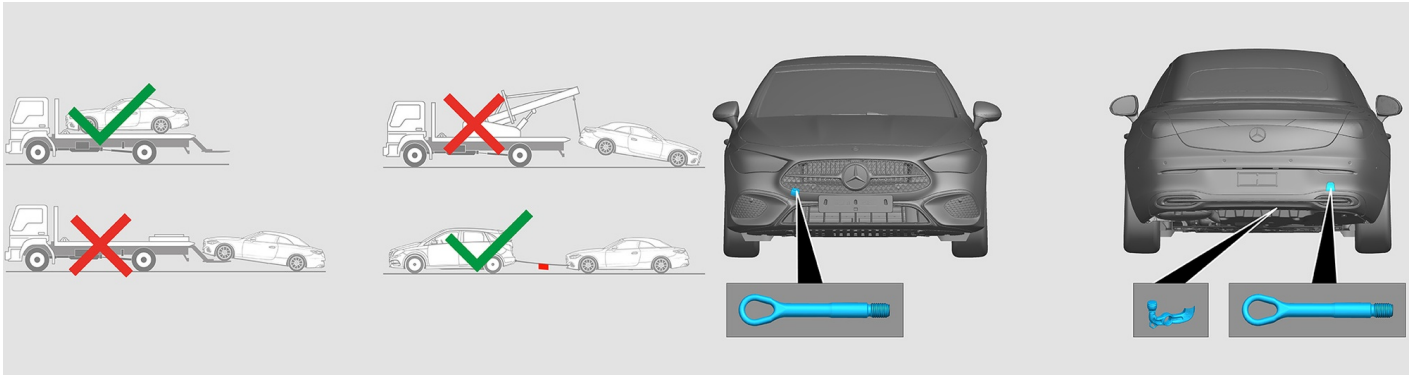

9. Important additional information

You can find more information in the [Guidelines for car towing services](#).

Note: Please see our [emergency response guide](#) for more information

10. Explanation of pictograms used



Vehicle on fuel of li-
quid group 2



General warning sign



Flammable



Hazardous to the hu-
man health



Corrosives



Acute toxicity



Explosive



Use water to extin-
guish the fire



Use dry foam to extin-
guish the fire



Use wet foam to ex-
tinguish the fire



Bonnet



Boot



Remove smart key



Air-conditioning com-
ponent



Warning; low temperat-
ure